WD8704EJ(A/F/G/H/S/V/W/Z)
WD8702EJ(A/F/G/H/S/V/W/Z)
WD8700EJ(A/F/G/H/S/V/W/Z)
WD8704RJ(A/F/G/H/S/V/W/Z)
WD8702RJ(A/F/G/H/S/V/W/Z)
WD8700RJ(A/F/G/H/S/V/W/Z)
WD8704CJ(A/F/G/H/S/V/W/Z)
WD8702CJ(A/F/G/H/S/V/W/Z)
WD8700CJ(A/F/G/H/S/V/W/Z)
WD8704DJ(A/F/G/H/S/V/W/Z)
WD8702DJ(A/F/G/H/S/V/W/Z)
WD8700DJ(A/F/G/H/S/V/W/Z)

Washing Machine

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register
your product at

www.samsung.com/register

SAMSUNG

WD8704CJ-02732A-02_EN.indd 1 2010-04-20 ¿ÀÈÄ 2:56:01

features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its super-size capacity to its energy efficiency, the Samsung washing machine has all the features to turn a mundane chore into a pleasure.

- **Silver Wash - Silver Wash Health System(selected model only)**

  The winning combination! Samsung's silver technology combines the sanitizing effect of silver with state-of-the-art science for the ultimate in clean. Two plates of pure silver are converted into silver ions through electrolysis. Even in cold, bleach-less water, the silver particles remove of odor causing bacteria for a "super clean" wash. So washing in cold water is energy efficient and better for your clothes.
  The Silver plates carry a warranty of ten years for 2 times run a week and can easily be replaced by a Service Technician if needed.

- **Washing to drying with one button**

  Enjoy convenient non stop washing and drying managing. 4 different special drying programs can be selected to perform the whole wash cycle including the drying cycle using one button.
  - Cupboard(standard program), Low temp drying, Iron,Time Drying (30min ~ 270mins)
    Those drying programs also can be operated independently of washing programs.

- **Child Lock**

  The Child Lock function ensures that curious little hands are kept out of your washing machine.
  This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

- **Wool Certified**

  The machine has been tested and passed the required Woolmark Company specification for machine washable wool products.
  Fabrics should be washed according to the instructions on the garment label as specified by Woolmark and Samsung.

- **Delay End**

  Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

- **Quick Wash**

  No time to lose! Less than 30 minutes wash will give you time to run out before it's too late. Our 29 minute Quick Wash program can be the solution to your busy life. Now you can wash your favourite clothes in only 29 minutes!

- **Delicates & Hand Wash Program**

  Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

- **Ceramic Heater for Durability & Energy Saving (selected models)**

  Our truly innovative Ceramic Heater is twice as durable as regular heaters.
  That saves you money on repairs. Plus, it eliminates the scale of hard water and save energy.

WD8704CJ-02732A-02_EN.indd 2 2010-04-20 ¿ÀÈÄ 2:56:01

• Air Wash

The Air Wash system deodorizes unpleasant smells and sterilizes the laundry that cannot be eliminated through a conventional washing system, a benefit of its unique air-washing mechanism.

- Air-washable : Woolen coats, cotton/down jumpers, sweaters, suits, pillows, cushions, needlework dolls
- Not applicable : leather, silk, velvet, electric blankets, other stained laundry

• Digital Graphic Display

The Digital Graphic Display control panel is clear and easy to use for minimum fuss and hassle. And while it is easy to operate, the Digital Graphic Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

• Wide door

Extra wide door aperture for convenient viewing! Easily add and remove laundry, especially for large sized laundry items such as bedding, towels etc.

• Direct Drive Motor

As the drum does not utilize belts or gears, vibrations are reduced significantly. This feature ensures that your washer machine is quieter and more durable.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The "Troubleshooting and information codes" section on page 29 tells you what to do if something goes wrong with your new washing machine.

WD8704CJ-02732A-02_EN.indd 3 2010-04-20 ¿ÀÈÄ 2:56:01

safety information

Throughout this manual, you'll see Warning ⚠ and Caution ⚠ notes. These warnings, cautions, and the important safety instructions that follow do not cover all possible conditions and situations that may occur. It's your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washing machine. Samsung is not liable for damages resulting from improper use.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

⚠ **WARNING**	Hazards or unsafe practices that may result in **severe personal injury or death**.
⚠ **CAUTION**	Hazards or unsafe practices that may result in **minor personal injury or property damage**.
⚠ **CAUTION**	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washing machine, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.
	Notice

These warning signs are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

Install and store your washing machine inside, away from exposure to weather.

Install and level your washing machine on a floor that can support its weight.

Your washing machine must be properly grounded. Never plug it into an ungrounded outlet.

WD8704CJ-02732A-02_EN.indd 4 2010-04-20 ¿ÀÈÄ 2:56:03

To reduce the risk of fire or explosion:

- Do not wash items that have been washed, soaked, or treated with gasoline, dry cleaning solvents, or other flammable or explosive substances. They give off vapors that could ignite or explode. Rinse by hand any material that has been exposed to cleaning solvent or other flammable liquids or solids before putting in your washing machine. Be sure that all traces of such liquids, solids, and fumes have been removed. Dangerous substances include acetone, denatured alcohol, gasoline, kerosene, certain liquid household cleaners and spot removers, turpentine, waxes, and wax removers.
- Do not put gasoline, dry cleaning solvents, or other flammable or explosive substances into the washing machine.
- Under certain conditions, hydrogen gas may be produced in a hot water system–such as your hot water heater -- that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If your hot water system has not been used for two weeks or more, turn on all hot water taps in your home, and let the water flow for several minutes before using your washing machine. This will release any hydrogen gas build–up. Since hydrogen gas is flammable, do not smoke or light an open flame during this time.

Ventilate immediately without touching the power plug if there is a gas leak.

Unplug the power cord before servicing your washing machine.

Before each wash, empty the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal metal.

Do not open the door of the washing machine if you can still see water. Check that the water has drained before opening the door.

Do not repair, replace, or service any part of your washing machine yourself unless you fully understand the recommended user–repair instructions and have the skills to carry them out. Work done by an unauthorized person may void your warranty.

Connect the washing machine to the water mains using the new set of hoses. Do not reuse the old set of hoses.

Water inlet hoses deteriorate over time. Check the hoses periodically for bulges, kinks, cuts, wear, and leaks, and replace them as needed and at least every five years.

All packaging and shipping bolts must be removed before the appliance is used. Serious damage may occur if they are not removed. See page 12 “Removing the shipping bolts”.

Before washing clothes for the first time, you must run a complete cycle without clothes. See “Washing for the first time”.

WD8704CJ-02732A-02_EN.indd 5 2010-04-20 ¿ÀÈÄ 2:56:03

safety information

The appliance is designed for home use only.

WARNING Make sure that water and electrical connections are made by qualified technicians, observing the user manual (see “Installing your washing machine”) and local safety regulations.

Before cleaning or carrying out maintenance, unplug the appliance from the electrical outlet.

Always unplug the appliance and turn off the water after use.

Make sure that the pockets of all clothing to be washed are empty.

Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Never allow pets and children to play on or in the appliance. It may cause injury or suffocate them.

The glass door becomes very hot during the washing cycle. Never touch on the glass door while it is in use.

Do not attempt to repair the appliance yourself. Repairs made by inexperienced or unqualified persons may cause injury and/or make more serious repairs to the appliance necessary.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance should only be serviced by our authorized service center, and only rated spare parts should be used.

WARNING Do not let children (or pets) play on or in your washing machine. The washing machine door does not open easily from the inside, and children may be seriously injured if trapped inside.

WARNING This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance

To use this appliance safely, the user should become familiar with the instructions for operation of the appliance and always take extra care when using it.

This appliance should be positioned to be accessible to the power plug, the water supply tabs and the drain pipes.

WARNING Packing materials can be dangerous to children; keep all packing material (plastic bags, polystyrene, etc.) well out of the reach of children.

Do not use processed water containing oil, cream or lotion, which is usually found in skincare shops or massage clinics.

- Otherwise this will cause the packing to be deformed, which causes a malfunction or water leak.

WD8704CJ-02732A-02_EN.indd 6 2010-04-20 ¿ÀÈÄ 2:56:03

A stainless washing tub does not usually rust. However if some metal such as a hair pin is left in the tub for an extended time, the tub could rust.

- Do not leave water or bleach containing chlorine in the tub for an extended period of time.
- Do not regularly use or leave water containing iron in the tub for an extended period of time. If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge or soft cloth to clean it. (Under no circumstances use a metal brush)

The dryer is not to be used if chemicals have been used for cleaning.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Use the new hose-sets and old hose-sets should not be reused.

WD8704CJ-02732A-02_EN.indd 7 2010-04-20 ¿ÀÈÄ 2:56:03

contents

SETTING UP YOUR WASHING MACHINE 9

9 Checking the parts
10 Meeting installation requirements
10 Electrical supply and grounding
10 Water Supply
11 Drain
11 Flooring
11 Surrounding temperature
11 Alcove or closet installation
11 Installing your washing machine

WASHING A LOAD OF LAUNDRY 17

17 Washing for the first time
17 Basic instructions
18 Using the control panel
20 Child lock
20 Sound off
20 Delay end
20 Drain Only Fuction
21 Air Wash
22 Using dry course
23 Washing clothes using the cycle selector
23 Washing clothes manually
24 Laundry guidelines
25 Detergent and additives information
25 Which detergent to use
26 Detergent drawer

CLEANING AND MAINTAINING YOUR WASHING MACHINE 27

27 Draining the washing machine in an emergency
27 Cleaning the exterior
28 Cleaning the detergent drawer and drawer recess
29 Cleaning the debris filter
29 Cleaning the water hose mesh filter
29 Repairing a frozen washing machine
29 Storing your washing machine

TROUBLESHOOTING AND INFORMATION CODES 30

30 Check these points if your washing machine...
31 Information codes

CYCLE CHART 32

32 Cycle chart

APPENDIX 33

33 Fabric care chart
33 Protecting the environment
33 Declaration of conformity
34 Specifications

WD8704CJ-02732A-02_EN.indd 8 2010-04-20 ¿ÀÈÄ 2:56:03

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

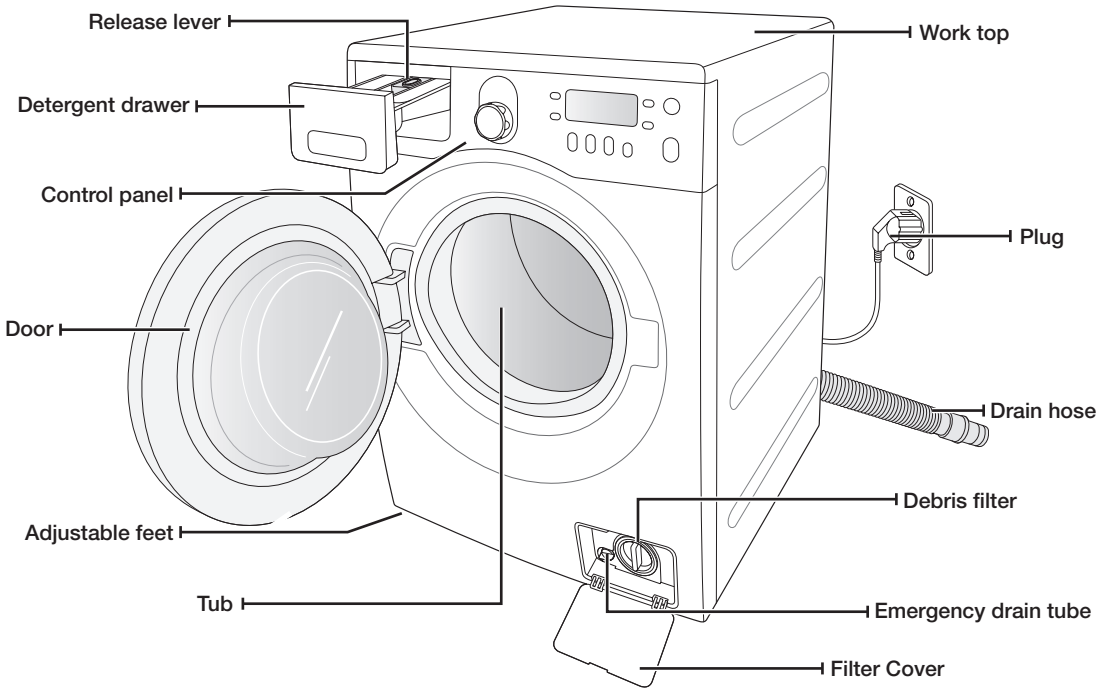

Spanner | * Bolt hole covers | Water supply hose | Hose guide

*** Bolt hole covers** : The number of bolt hole covers depends on the model (3~5 covers).

WD8704CJ-02732A-02_EN.indd 9 2010-04-20 ¿ÀÈÄ 2:56:04

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding

To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/FNPA, No. 70 Latest Revision and local codes and ordinances. It is the personal responsibility of the appliance owner to provide adequate electrical service for this appliance.

WARNING Never use an extension cord.
Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:
- 220V~240V 50Hz 15 AMP fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.
Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result electrical shock.
Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/ flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 4 feet (122cm) of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.

Most plumbing supply stores sell inlet hoses of various lengths up to 10 feet (305cm) long.

You can reduce the risk of leaks and water damage by:
- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.

WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

WD8704CJ-02732A-02_EN.indd 10 2010-04-20 ¿ÀÈÄ 2:56:04

Drain

Samsung recommends a standpipe height of 18 in (46 cm). The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm	Rear – 51 mm
Top – 25 mm	Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1
Selecting a location

Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 32 ˚F or 0 ˚C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord

WD8704CJ-02732A-02_EN.indd 11 2010-04-20 ¿ÀÈÄ 2:56:04

setting up your washing machine

STEP 2
Removing the shipping bolts

Before installing the washing machine, you must remove all shipping bolts from the back of the unit.

1. Loosen all the bolts with the supplied wrench.

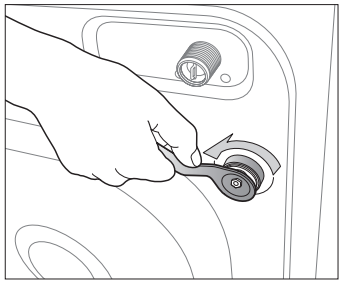

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

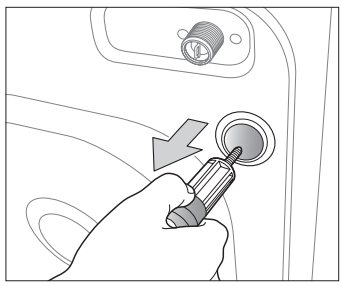

3. Fill the holes with the supplied plastic covers.

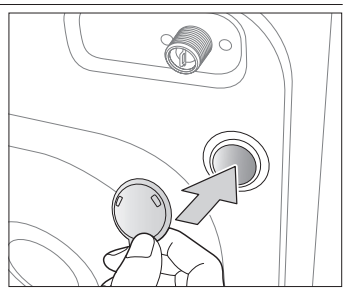

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.

WD8704CJ-02732A-02_EN.indd 12 2010-04-20 ¿ÀÈÄ 2:56:05

STEP 3
Adjusting the levelling feet

When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.
2. Level your washing machine by turning the leveling feet in and out as necessary by hand.

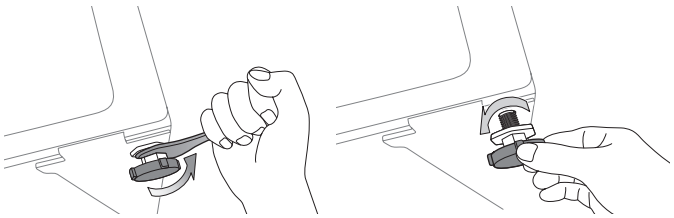

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

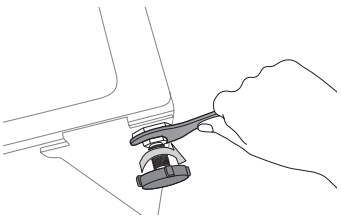

STEP 4
Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

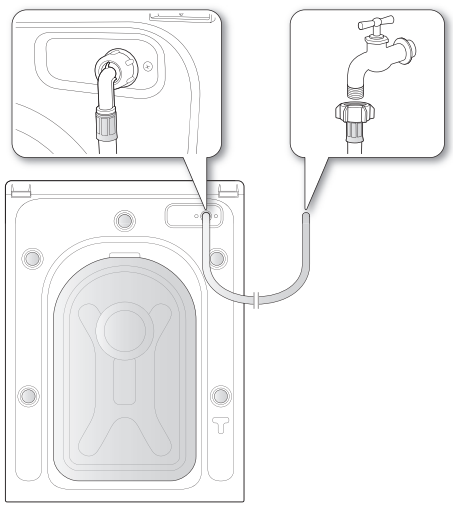

The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.

WD8704CJ-02732A-02_EN.indd 13 2010-04-20 ¿ÀÈÄ 2:56:06

setting up your washing machine

Connecting the water supply hose (selected models)

1. Remove the adaptor from the water supply hose.

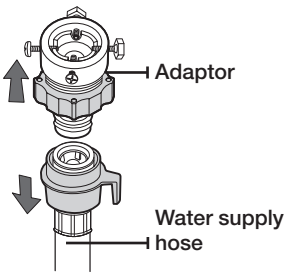

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.

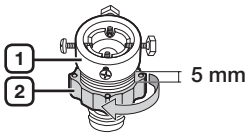

3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards. Turn part (2) following the arrow and connect (1) and (2).

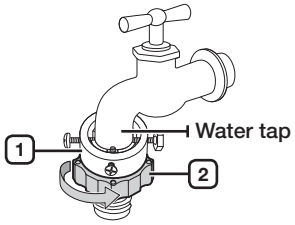

4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

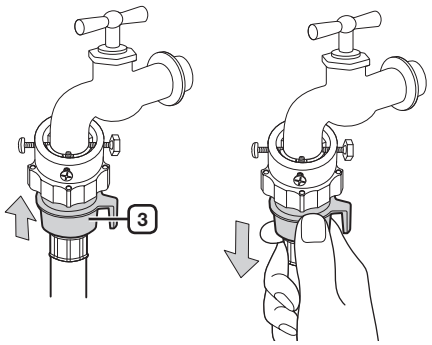

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

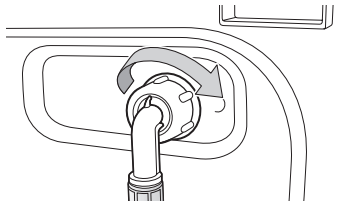

WD8704CJ-02732A-02_EN.indd 14 2010-04-20 ¿ÀÈÄ 2:56:07

6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.

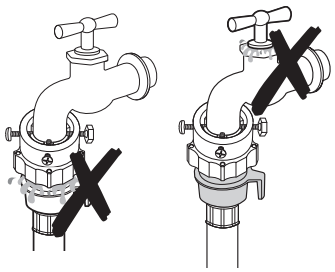

WARNING Do not use your washing machine if there is a water leak. This may cause electric shock or injury.

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

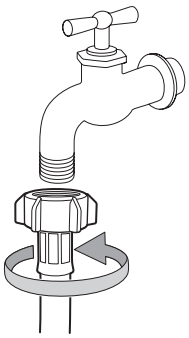

Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

WD8704CJ-02732A-02_EN.indd 15 2010-04-20 ¿ÀÈÄ 2:56:07

setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

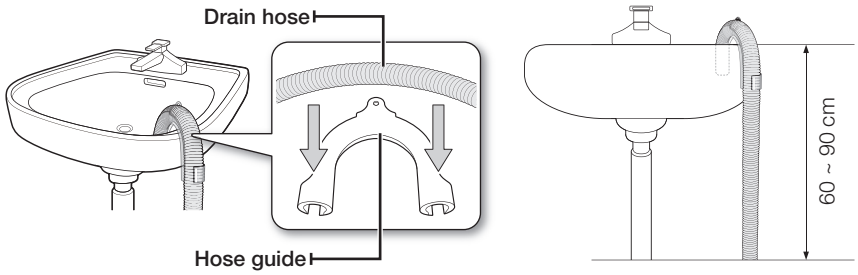

2. In a sink drain pipe branch: The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
3. In a drain pipe: We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

The standpipe drain requires;
- minimum diameter 5 cm.
- minimum carry-away capacity 60 liter per minute.

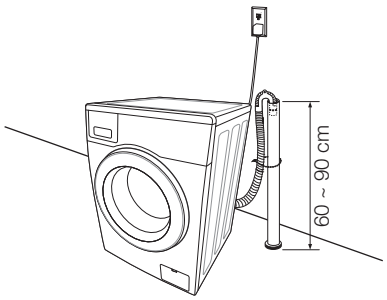

STEP 5
Powering your washing machine

Plug the power cord into a wall sockets, a 230 volt 50 Hz approved electrical outlet protected by a 15-amp fuse or comparable circuit breaker. (For more information on electrical and grounding requirements, see page 10.)

WD8704CJ-02732A-02_EN.indd 16 2010-04-20 ¿ÀÈÄ 2:56:08

washing a load of laundry

With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment Ⅱ in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

This will remove any water that might be left over in the machine from the manufacturer's test run.

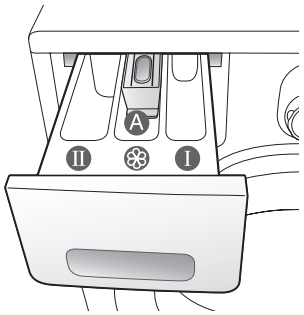

Compartment Ⅰ: Detergent for prewash, or starch.
Compartment Ⅱ: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.
Compartment ❀: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A")

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

WARNING Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 24.

- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not wash water-proofed items.

2. Close the door until it latches.
3. Turn the power on.
4. Add detergent and additives to the dispenser drawer.
5. Select the appropriate cycle and options for the load.
   The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
6. Press the **Start/Pause** button.

WD8704CJ-02732A-02_EN.indd 17 2010-04-20 ¿ÀÈÄ 2:56:10

washing a load of laundry

USING THE CONTROL PANEL

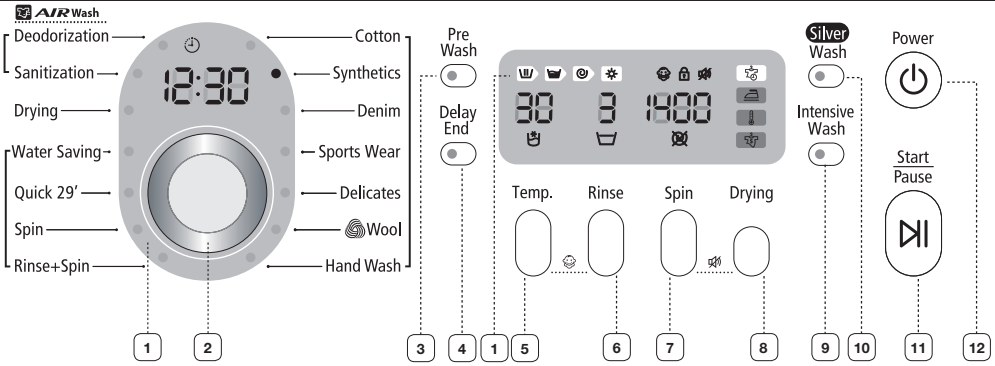

1 **DIGITAL GRAPHIC DISPLAY**	Displays the remaining wash cycle time, all cycle information, and error messages.
2 **CYCLE SELECTOR**	Select the tumble pattern and spin speed for the cycle. For detailed information, refer to "Washing clothes using the cycle selector". (see page 22) **Cotton** - For averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc. **Synthetics** - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends. **Denim** - A higher water level in the main wash and extra rinse ensure that no washing powder remains that may mark your clothing. **Sports Wear** - Use for water-proofed or proofed garments to keep their good looks and fresh feel. **Delicates** - For sheer fabrics, brassieres, lingerie, dresses, shirts and blouses. For best results, use liquid detergent. **Wool** - Only for machine-washable wool. A load should be less than 2.0 kg. • The wool course washes the laundry using gentle cradling actions. During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem. • Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers. The wool wash cycle of this machine has been approved by Woolmark for the washing of machine-washable Woolmark products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine, M0509 (Certificate Number issued by IWS NOM INEE Co., Ltd.) **Handwash** - A very light wash cycle as gentle as a hand wash. **Air Wash** - This course is useful for removing bad odors. Turning the Cycle Selector cycles through the following operating modes. (Deodorization → Sanitization) • Deodorization - Reduces bad smells from the laundry • Sanitization - Deodorize and sterilize the laundry by stronger air wash action with higher temp. **Drying** - Select to dry laundry automatically by detecting the amount and weight of the laundry. **Water Saving** - This is a specially designed course that enables you to wash laundry effectively with the minimum amount of water. Water Saving, 40℃, Intensive Wash/Dry, 1400rpm spin is recommended for a normally soiled cotton load.

WD8704CJ-02732A-02_EN.indd 18 2010-04-20 ¿ÀÈÄ 2:56:10

	Quick 29' - For lightly soiled garments that you require quickly. **Spin** - Performs an additional spin cycle to remove more water. **Rinse + Spin** - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load. **Drain Only** - Turn the **Cycle Selector** to the Spin position, press the **Spin** button, and then press the **Start/Pause** button to drain the water.
3 **PREWASH SELECTION BUTTON**	Press this button to select pre-wash. Pre-wash is only available with: Cotton, Synthetics, Denim, Sports Wear, Water Saving .
4 **DELAY END SELECTION BUTTON**	Press this button repeatedly to cycle through the available Delay End options (from 3 hours to 19 hours in one hour increments). The hour displayed indicates the time when the wash cycle will be finished.
5 **TEMPERATURE SELECTION BUTTON**	Press this button repeatedly to cycle through the available water temperature options: (Cold Water, 30 ˚C, 40 ˚C , 60 ˚C and 95 ˚C).
6 **RINSE SELECTION BUTTON**	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.
7 **SPIN SELECTION BUTTON**	Press the button repeatedly to cycle through the available speeds for the spin cycle. WD8704 \, , 400, 800, 1200, 1400 rpm WD8702 \, , 400, 800, 1000, 1200 rpm WD8700 \, , 400, 600, 800, 1000 rpm "No spin " - The laundry remains in the drum and no spin cycle is performed after the final drain. "Rinse Hold \" -The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.
8 **Drying BUTTON**	Pressing the button cycles through the following options. Cup Board → Low Temp → Iron → Time Dry (30min. → 1:00min. → 1:30min. → 2:00min. → 2:30min. → 3:00min. → 3:30min. → 4:00min. → 4:30min.) → Cup Board "Cup Board " - Use this cycle to dry loads such as cotton, underwear, and linen. "Low Temp " - This cycle protect heat-sensitive items at a low drying temperature. "Iron " - Finishes the dry cycle in a moist state appropriate for Ironing. "Time Dry " -Dry the laundry for the specified period of time. • You must avoid washing laundry that may not be dried as it may be deformed even at low temperatures. • The Cup Board, Low Temp, Iron and Time Dry options detect the weight of the laundry in order to display an accurate drying time and dry them more completely. • The drying conditions may differ depending on the type and the amount of laundry.
9 **INTENSIVE WASH SELECTION BUTTON**	Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time is increased for each cycle.
10 **SILVER WASH SELECTION BUTTON**	Silver Wash water is supplied during the wash cycle as well as during the last rinse cycle, removing bacteria as well as giving protection from bacterial growth for up to one month.
11 **START/PAUSE SELECTION BUTTON**	Press to pause and restart a cycle.
12 **POWER BUTTON**	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

WD8704CJ-02732A-02_EN.indd 19 2010-04-20 ¿ÀÈÄ 2:56:12

washing a load of laundry

Child lock

The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp.** and **Rinse** buttons at the same time for 3 seconds. "Child Lock" will be lit when this feature is activated.

When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

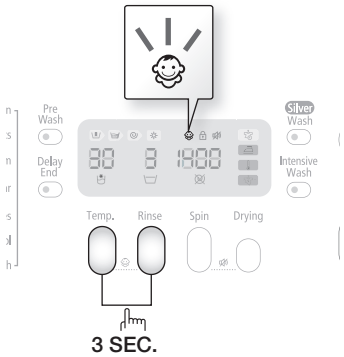

Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Spin** and **Drying** buttons at the same time for 3 seconds. The "Sound Off" will be lit when this feature is activated.

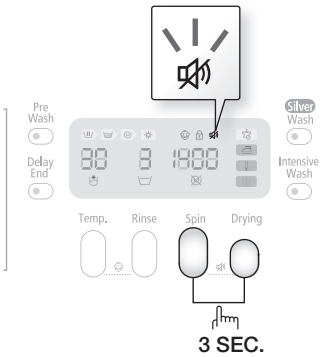

Delay end

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay End** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The "Delay End" indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the washing machine on again.

Drain Only Fuction

When you want just drain water from washing machine, follow directions below.

1. Press the **Power** button
2. Turn the Cycle Selector to the Spin positio.
3. Press the **Spin** button 1 times until rpm sign is off.
4. Then "1" shows up on time display in center.
5. Press the **Start/Pause** button.

WD8704CJ-02732A-02_EN.indd 20 2010-04-20 ¿ÀÈÄ 2:56:14

Air Wash

Air Wash can refresh laundry without using water owing to its powerful airing system. Clothing that can be refreshed includes woolen coats, cotton or jumpers, sweaters and suits. (Two items or less (less than 1 kg)

1. Open the door, place the laundry into the washing machine and close the door.
2. Press the **Power** button.
3. Select **Air Wash** by turning the **Cycle Selector**.
   - Each time the button is pressed, the operating mode cycles through the following sequence: Deodorization, Sanitization ...

MODE	CYCLE TIME
Deodorization	29 min
Sanitization	59 min

   - When one of these options has been selected, no other button can be selected and you can only select the delay end time from between 3:00 – 19:00.
4. Close the door and press the **Start/Pause** button.

- When there is water in the tub, **Air Wash** cannot be selected. Drain the water and select **Air Wash**.
- Press the **Start/Pause** or **Power** button to remove the laundry.
- Fragrance or dryer sheets can be used with Air Wash programs to add fragrance to your refreshed laundry (one sheet per one or two items).

Avoid Air Wash the following clothes:

- Sensitive clothes made of leather, mink, fur, silk, etc.
- Underwear trimmed with lace, 'glued' doll cushions, and dress suits may have their decorations loosened.
- Clothes trimmed with buttons can cause them to break.
- Starchy clothes can become deformed.
- Hard bedding such as a wooden pillows (neck-rest)
  - Pillows or blankets filled with plastic or starch rather than cotton
  - Electric blankets
- Furry blankets
- Bulky blankets
- Latex pillow

WD8704CJ-02732A-02_EN.indd 21 2010-04-20 ¿ÀÈÄ 2:56:15

washing a load of laundry

USING DRY COURSE

Refer to the label of drying capacity and be sure to put in the clothes to the lower level than the marked line for the dried clothe of 5.0kg.

1. Open the door, put in the clothes and close the door again.
2. Press the **Power** button and then press the **Drying** button.
   : The standard course will be selected automatically.
   Drying is availably selected only at the courses such as cotton, synthetics, denim and sports wear.
3. Select **Drying** button as follows.
   Drying Programs

   - Every press of this button will select drying type repeatedly in the following order: Cup Board → Low Temp → Iron → Time Dry (30min. →1:00min. → 1:30min. → 2:00min. → 2:30min. → 3:00min. → 3:30min. → 4:00min. → 4:30min.) → Cup Board

Drying Type		Information	Max Load	Time (Max Load)
Auto Drying	Cupboard( )	Standard: Dries the laundry.	3.5kg	160min.
	Low Temp.( )	Dries the laundry at a low temperature to protect the texture of the laundry.	2.0kg	160min.
	Iron( )	For leaving items partially damp so that it can be easily ironed	2.0kg	30min.
Time Drying( )		You can select the appropriate drying time depending on the texture, quantity, and moisture.	5.0kg	270min.

   - It automatically displays Drying Time by sensing the weight of clothes before drying for increasing the drying effect.
   - For laundry weighing less than 3.5kg, use the Auto Dry. For laundry that weighs more, please use the Time Dry.
   - If both the spin and drying cycles are selected, the spin speed is automatically selected to enhance the drying efficiency.
   - When using the drying cycle, check if the water supply valve is opened.
4. Put suitable amount of detergent and fiber softener in the detergent tray and close it again.
5. Press **Start/Pause** button.
   : It automatically performs an optimal function from washing to drying.
   - The selected course can't be altered after the start of drying.
   - If you select Drying function, the intensity of SPIN will be set up as High in default for increasing the drying effect.
   - If cold water is not supplied, drying will not be performed.
   - If you do not take out clothes from the tub after the end of drying, a function of wrinkle protection will be performed for about 30 minutes with the display of [End]. In order to take out the clothes: press firstly Start/Pause or Power button and take them out.
   - In case you wish to dry after hand washing, select both Spin and Dry at the same time.

WD8704CJ-02732A-02_EN.indd 22 2010-04-20 ¿ÀÈÄ 2:56:15

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power** button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling it.
5. Close the door.
6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.

Pre-wash is only available when selecting the Cotton, Synthetics, Denim, Sports Wear, and Water Saving cycles. It is only necessary if your clothing is heavily soiled.

7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: Cotton, Synthetics, Denim, Sports Wear, Delicates, Wool, Hand Wash, Water Saving , Quick 29'. The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause** button to unlock the door.

The door cannot be opened when the water is too HOT or the water level is too HIGH.

2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp.** button to select the temperature. (Cold water, 30 ˚C, 40 ˚C, 60 ˚C, 95 ˚C)
8. Press the **Rinse** button to select the required number of rinse cycles.
   The maximum number of rinse cycles is five.
   The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed.
   The rinse hold function allows you to remove items that are still wet from the washing machine. (⊗ : No Spin, ⎵ : Rinse Hold)
10. Press the **Delay End** button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

WD8704CJ-02732A-02_EN.indd 23 2010-04-20 ¿ÀÈÄ 2:56:15

washing a load of laundry

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.

Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.

Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

Determining the load capacity

Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity
Model	WD8704/ WD8702/ WD8700
Cotton **- average/lightly soiled** **- heavily soiled**	8.0 kg
Synthetics	3.0 kg
Denim	3.0 kg
Sports Wear	2.5 kg
Delicates	2.5 kg
Wool	2.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Duvets, the wash time may be lengthened or the spin efficiency may be degraded.

WD8704CJ-02732A-02_EN.indd 24 2010-04-20 ¿ÀÈÄ 2:56:16

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

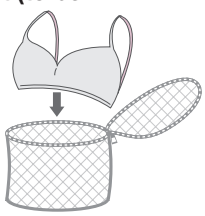

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

CAUTION Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use “low suds” laundry detergent, which is designed for automatic washing machines.
Follow the detergent manufacturer’s recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

Please note the following when using the Wool course.

- Use a neutral liquid detergent for wool only.
- When using a powder detergent, it may remain on the laundry and cause damage to the material (wool).

WD8704CJ-02732A-02_EN.indd 25 2010-04-20 ¿ÀÈÄ 2:56:16

washing a load of laundry

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

Do NOT open the detergent drawer when your washing machine is running.

1. Pull out the detergent drawer on the left side of the control panel.
2. Add the recommended amount of laundry detergent directly into the detergent compartment Ⅱ before starting your washing machine.
3. Add the recommended amount of fabric softener into the softener compartment ❀ if required.

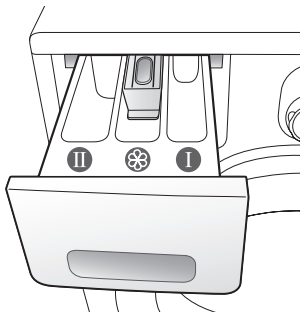

CAUTION Do NOT add any powder/liquid **detergent** to the softener compartment (❀).

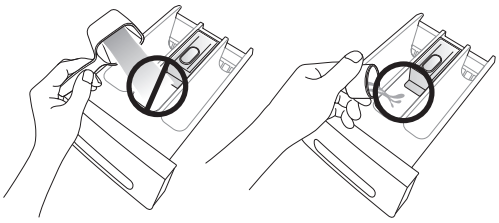

4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment Ⅰ.

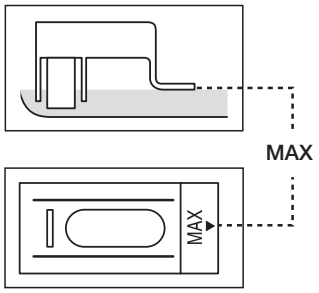

When washing large items do NOT use the following detergetnt types.

- Tablet and capsule type detergents
- Detergents using a ball and net

Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked).

Be careful that the fabric softener does not overflow, when you close the detergent drawer after adding fabric softener into the rinse detergent compartment.

WD8704CJ-02732A-02_EN.indd 26 2010-04-20 ¿ÀÈÄ 2:56:17

cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter cover using a coin or a key.

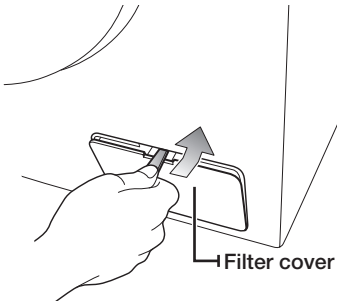

3. Unscrew the emergency drain cap by turning it to the left.

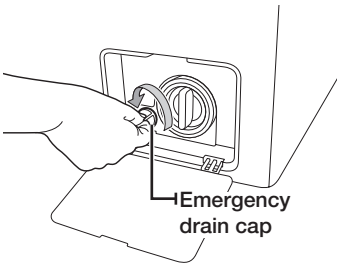

4. Hold the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
5. Allow all the water to flow into a bowl.
6. Reinsert the drain tube and screw the cap back on.
7. Replace the filter-cover.

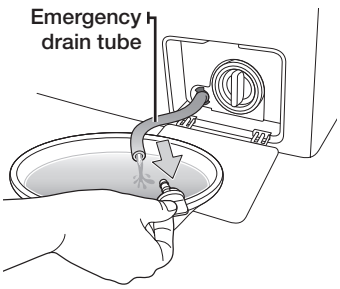

CLEANING THE EXTERIOR

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

WD8704CJ-02732A-02_EN.indd 27 2010-04-20 ¿ÀÈÄ 2:56:17

cleaning and maintaining your washing machine

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS

1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the liquid detergent divider from the detergent drawer

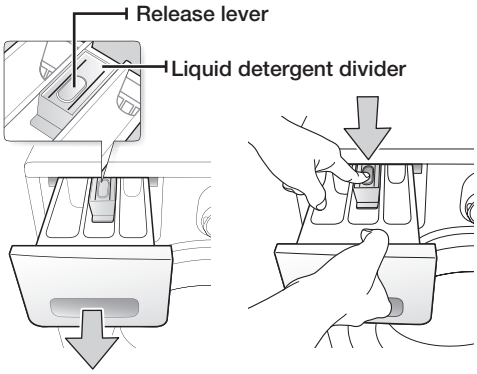

3. Wash all parts under running water.

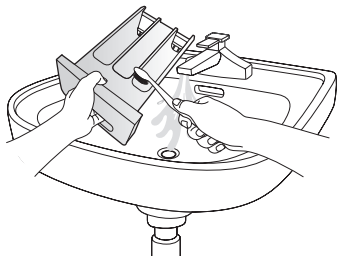

4. Clean the drawer recess with an old toothbrush.
5. Replace the liquid detergent divider by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

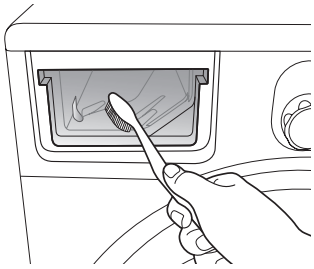

WD8704CJ-02732A-02_EN.indd 28 2010-04-20 ¿ÀÈÄ 2:56:18

CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of "5E" is displayed. (Refer to "Draining the washing machine in an emergency" in the previous page.)

1. Open the filter cover by using a key or coin.
2. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
3. Unscrew the debris filter cap.

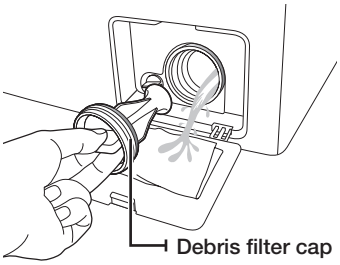

4. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
5. Replace the debris filter cap.
6. Replace the filter cover.

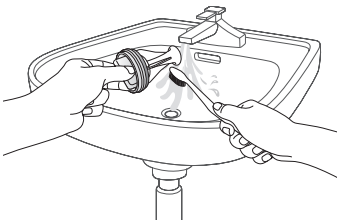

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of "4E" is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the Quick 29' cycle and add bleach to the bleach compartment. Run your washing machine through the cycle without a load.
2. Turn the water taps off and disconnect the inlet hoses.
3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.

If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

WD8704CJ-02732A-02_EN.indd 29 2010-04-20 ¿ÀÈÄ 2:56:19

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remains in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• The door will not open until 3 minutes after the machine stops or the power turns off.

If the problem persists, contact your local Samsung Customer Service.

WD8704CJ-02732A-02_EN.indd 30 2010-04-20 ¿ÀÈÄ 2:56:19

INFORMATION CODES

When your washing machine malfunctions, you may see an information code on the display. If that happens, check this table and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Close the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an “UE” error message will be shown in the display window.
cE/3E	• Call the after-sales service.
Hot	• It appears when the internal temperature of the drum is high. The fan will automatically function, so just wait until “**Hot**” indication disappeared.

For any codes not listed above, or if the suggested solution doesn’t fix the problem, call your Samsung Service Centre or local Samsung dealer.

WD8704CJ-02732A-02_EN.indd 31 2010-04-20 ¿ÀÈÄ 2:56:19

cycle chart

CYCLE CHART

(● user option)

PROGRAM	Max load(kg)	DETERGENT			Silver wash	Max Temp (℃)
	WD8704/ WD8702/ WD8700	Pre-wash	wash	Softener		
Cotton	8.0	●	yes	●	●	95
Synthetics	3.0	●	yes	●	●	60
Denim	3.0	●	yes	●	●	60
Sports Wear	2.5	●	yes	●	●	60
Delicates	2.5	-	yes	-	-	40
Wool	2.0	-	yes	-	-	40
Handwash	2.0	-	yes	●	-	40
Deodorization	1.0	-	-	-	-	-
Sanitization	1.0	-	-	-	-	-
Drying	5.0	-	-	-	-	-
Water Saving	3.0	●	yes	●	●	60
Quick 29’	3.0	-	yes	●	-	60

PROGRAM	Spin Speed(MAX) rpm			Delay end	Cycle time (min)
	WD8704	WD8702	WD8700		
Cotton	1400	1200	1000	●	120
Synthetics	1200	1200	1000	●	90
Denim	800	800	800	●	78
Sports Wear	1200	1200	1000	●	72
Delicates	800	800	800	●	50
Wool	800	800	800	●	38
Handwash	400	400	400	●	31
Deodorization	-	-	-	●	29
Sanitization	-	-	-	●	59
Drying	-	-	-	●	160
Water Saving	1200	1200	1000	●	70
Quick 29’	1400	1200	1000	●	29

1. A cycle with a prewash takes approx. 15 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
3. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
4. When the Intensive Wash function is selected, the cycle time is increased for each cycle.

WD8704CJ-02732A-02_EN.indd 32 2010-04-20 ¿ÀÈÄ 2:56:19

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing, and dry cleaning when necessary.
The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundering problems.

	Resistant material		Can be ironed at 100 ˚C max
	Delicate fabric		Do not iron
	Item may be washed at 95 ˚C		Can be dry cleaned using any solvent
	Item may be washed at 60 ˚C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item may be washed at 40 ˚C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item may be washed at 30 ˚C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manu-facturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

WD8704CJ-02732A-02_EN.indd 33 2010-04-20 ¿ÀÈÄ 2:56:24

appendix

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE		
DIMENSIONS			WD8704CJ/WD8704DJ/WD8704EJ/WD8704RJ WD8702CJ/WD8702DJ/WD8702EJ/WD8702RJ WD8700CJ/WD8700DJ/WD8700EJ/WD8700RJ		
			W598mm X D600mm X H844mm		
WATER PRESSURE			50 kPa ~ 800 kPa		
WATER VOLUME			56 ℓ		
NET WEIGHT			WD8704CJ/ WD8704DJ/ WD8704EJ/ WD8704RJ	WD8702CJ/ WD8702DJ/ WD8702EJ/ WD8702RJ	WD8700CJ/ WD8700DJ/ WD8700EJ/ WD8700RJ
			70 kg	69 kg	68 kg
WASH AND SPIN CAPACITY			8.0 kg [DRY LAUNDRY]		
DRY CAPACITY			5 kg		
POWER CONSUMPTION	MODEL		WD8704CJ/WD8704DJ/WD8704EJ/WD8704RJ WD8702CJ/WD8702DJ/WD8702EJ/WD8702RJ WD8700CJ/WD8700DJ/WD8700EJ/WD8700RJ		
	WASHING		220 V	150 W	
			240 V	150 W	
	WASH AND HEATING		220 V	2000 W	
			240 V	2400 W	
	DRYING		230V	1600W	
	SPIN	MODEL	WD8704CJ/ WD8704DJ/ WD8704EJ/ WD8704RJ	WD8702CJ/ WD8702DJ/ WD8702EJ/ WD8702RJ	WD8700CJ/ WD8700DJ/ WD8700EJ/ WD8700RJ
		230V	350 W	250 W	200 W
	PUMPING		34 W		
PACKAGE WEIGHT	MODEL		WD8704CJ/WD8704DJ/WD8704EJ/WD8704RJ WD8702CJ/WD8702DJ/WD8702EJ/WD8702RJ WD8700CJ/WD8700DJ/WD8700EJ/WD8700RJ		
	PAPER		2.5 kg		
	PLASTIC		2.5 kg		
SPIN REVOLUTIONS	MODEL		WD8704CJ/ WD8704DJ/ WD8704EJ/ WD8704RJ	WD8702CJ/ WD8702DJ/ WD8702EJ/ WD8702RJ	WD8700CJ/ WD8700DJ/ WD8700EJ/ WD8700RJ
	rpm		1400	1200	1000

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

WD8704CJ-02732A-02_EN.indd 34 2010-04-20 ¿ÀÈÄ 2:56:24

memo

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com

Code No. DC68-02732A-02_EN

WD8704EJ(A/F/G/H/S/V/W/Z)
WD8702EJ(A/F/G/H/S/V/W/Z)
WD8704EJ(A/F/G/H/S/V/W/Z)
WD8704RJ(A/F/G/H/S/V/W/Z)
WD8702RJ(A/F/G/H/S/V/W/Z)
WD8700RJ(A/F/G/H/S/V/W/Z)
WD8704CJ(A/F/G/H/S/V/W/Z)
WD8702CJ(A/F/G/H/S/V/W/Z)
WD8700CJ(A/F/G/H/S/V/W/Z)
WD8704DJ(A/F/G/H/S/V/W/Z)
WD8702DJ(A/F/G/H/S/V/W/Z)
WD8700DJ(A/F/G/H/S/V/W/Z)

الغسالة

دليل المستخدم

إمكانيات هائلة

نشكرك على شراء هذا المنتج من Samsung.
للحصول على خدمة أكثر تكاملاً, الرجاء تسجيل المنتج على موقع

www.samsung.com/register

SAMSUNG

WD8704CJ-02732A-02_AR.indd 1 4/30/2010 3:07:00 PM

ميزات الغسالة الجديدة من samsung

تتميز الغسالة الجديدة بأنها مزودة بإمكانية تغيير الطريقة التي ترغب في إجراء الغسيل بها. تتميز غسالة Samsung بوجود كافة الميزات التي تحول المهام غير المرغوبة إلى شيء ممتع، بدءاً من سعتها ذات الحجم الفائق وحتى استهلاكها الاقتصادي للطاقة.

- **غسيل بالفضة - نظام الغسيل بالفضة الصحي (طرازات مختارة فقط)**

تركيبة رائدة! تعمل تقنية الغسيل الفضي من Samsung على تجميع آثار التعقيم الناجمة عن الغسيل الفضي باستخدام العلوم المتقدمة للحصول على أقصى درجات الغسيل النظيف. حيث يتم تحويل طبقين من الفضة النقية إلى أيونات فضية عن طريق التحليل بالكهرباء. وتقوم الجزيئات الفضية بإزالة الرائحة المسببة للبكتريا التى تحدث أثناء عملية الغسيل "فائق النظافة" حتى وإن كانت في ماء بارد أو ماء بلا مادة تبييض اللون.لذا فإن عملية الغسيل في ماء بارد تعمل على توفير طاقة كافية ومفيدة للغسيل. تتمتع طبقتا الفضة بضمان عشر سنوات بمعدل مرتين تشغيل أسبوعيًا كما يمكن استبدالهما بسهولة بواسطة فني الصيانة، إذا لزم الأمر.

- **الغسيل إلى التنشيف بواسطة زر واحد**

تمتع بغسيل مريح بدون توقف وكذا إدارة التجفيف. فضلاً عن إمكانية اختيارك ٤ برامج تجفيف خاصة لإجراء دورة الغسيل الكلية بما في ذلك دورة التجفيف باستخدام زر واحد.

- كما يمكن تشغيل برامج التجفيف هذه بمعزل عن برامج الغسيل ومنها

"خزانة" (البرنامج القياسي)، "تجفيف بدرجة حرارة منخفضة"، "الكي"، "وقت التجفيف" (٣٠ ~ ٢٧٠ دقيقة).

- **التأمين ضد عبث الأطفال**

تضمن وظيفة تأمين ضد عبث الأطفال إبقاء الأطفال بعيداً عن الغسالة.
وتعمل ميزة الأمان هذه على منع الأطفال من اللعب بالغسالة بالإضافة إلى تنبيهك عند تشغيلها.

- **اعتماد غسيل الصوف**

لقد تم اختبار الغسالة وقد تطابقت مع المواصفات التي حددتها شركة Woolmark الخاصة بغسل المنتجات الصوفية في الغسالة.
يجب غسل الملابس وفقاً للتعليمات المدونة على الملصق الموجود على الملابس كما حددتها شركتي Woolmark وSamsung.

- **تأجيل التوقف**

تأجيل الدورة حتى ١٩ ساعة بإمكانية زيادة ساعة وزيادة إمكانية استخدام الغسالة لاسيما عندما ترغب في الذهاب للخارج.

- **غسيل سريع**

لا مجال لضياع الوقت! نظراً لأن عملية الغسيل تستغرق أقل من ٣٠ دقيقة مما تيسر عليك مزاولة مهامك قبل فوات الأوان.
لذا يُمثل برنامج غسيل سريع حلاً لزخم حياتك في ٢٩ دقيقة. يمكنك الآن غسل ملابسك المفضلة في ٢٩ دقيقة فقط!

- **برنامج الأنسجة الرقيقة و غسيل يدوي**

يمكنك أن تحظى بعناية غسيل خاصة لملابسك عن طريق تحديد درجة حرارة ملائمة ودورة غسيل بسيطة وكمية ماء مناسبة.

- **سخان خزفي للمتانة وتوفير الكهرباء (طرازات محددة)**

يتميز السخان الخزفي المبتكر بأنه ذو قوة مضاعفة عن السخانات العادية.
مما يوفر تكاليف الصيانة والإصلاحات. فضلاً عن أنه يخفف من حدة الماء الساخن على الملابس ويوفر الكهرباء.

WD8704CJ-02732A-02_AR.indd 2 4/30/2010 3:07:00 PM

- **غسيل بالهواء**

يقوم نظام "الغسيل بالهواء" بإزالة الروائح الكريهة وتعقيم الغسيل من الروائح الكريهة التي يصعب التخلص منها والناجمة عن نظام الغسيل التقليدي. لذا فهي تعتبر إحدى فوائد تقنية التنظيف بالهواء الفريدة.

- الملابس التي يمكن تنظيفها بالهواء : المعاطف الصوفية والسترات القطنية/الداخلية والسترات الثقيلة والبدل والمساند والوسائد والملابس المطرزة
- الملابس التي لا يمكن تنظيفها بالهواء : الملابس الجلدية والحريرية والناعمة والبطاطين الكهربائية والملابس الأخرى المتسخة

- **لوحة العرض الرسومية الرقمية**

تتميز لوحة تحكم العرض الرسومية الرقمية بأنها واضحة وسهلة الاستخدام مما يقلل احتمالية حدوث مشاكل أو متاعب. وبالإضافة إلى سهولة تشغيلها، تتيح لك لوحة العرض الرسومية الرقمية إجراء تعديلات بسرعة ودقة للحصول على نتائج رائعة للغسيل.

- **باب واسع**

فتحة عريضة جدًا للباب لإتاحة مشاهدة عملية الغسيل بشكل مناسب! كما أنه يسمح بإضافة قطع الملابس وإزالتها بسهولة، وخصوصًا القطع كبيرة الحجم مثل المفروشات والمناشف إلخ.

- **محرك كهربائي مباشر**

نظرًا لأن حاوية الغسيل لا تستخدم الأحزمة أو التروس، لذا فإن الاهتزازات تعتبر قليلة بشكل ملحوظ. وكنتيجة لذلك، فإن هذه الميزة تضمن تشغيل الغسالة بشكل أكثر هدوءً وأكثر تحملاً.

يحتوى هذا الدليل على معلومات هامة حول عملية التركيب والاستخدام وصيانة غسالة Samsung الجديدة. ويمكنك الرجوع إليه للتعرف على شكل لوحة التحكم، والتعليمات الخاصة بكيفية استخدام الغسالة، والتلميحات المتعلقة بالوصول إلى أقصى استفادة من أحدث الميزات والإمكانات المتوفرة بها. يرشدك قسم "**استكشاف المشاكل وحلها ورموز المعلومات**" الواردة في صفحة ٢٩ إلى ما يتوجب عليك فعله في حالة حدوث عطل بالغسالة الجديدة.

WD8704CJ-02732A-02_AR.indd 3 4/30/2010 3:07:00 PM

معلومات السلامة

ستجد بين ثنايا هذا الدليل، ملاحظات تحذيرية ⚠ وتنبيهية ⚠. لا تشير التحذيرات والتنبيهات وإرشادات السلامة الهامة التالية إلى كافة الظروف والمواقف المحتمل التعرض لها. لذا تقع على عاتقك مسئولية التعامل بحذر وانتباه وعناية عند تركيب الغسالة وصيانتها وتشغيلها. لا تقع على شركة Samsung أي مسؤولية تجاه الأضرار الناجمة عن سوء الاستخدام.

الرموز والاحتياطات الهامة للسلامة

تشير الرموز والعلامات الموجودة في دليل المستخدم هذا إلى ما يلي:

⚠ تحذير	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي **إلى إصابات جسدية بالغة أو الوفاة**.
⚠ تنبيه	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي **إلى إصابات طفيفة للأفراد أو تلف الغسالة**.
⚠ تنبيه	لتقليل خطر حدوث حريق أو انفجار أو التعرض لصدمة كهربائية أو إصابة جسدية عند استخدام الغسالة، اتبع احتياطات السلامة الأساسية التالية:

	ممنوع.
	ممنوع الفك.
	ممنوع اللمس.
	اتبع الإرشادات كما هي.
	قم بفصل موصل الطاقة من مقبس الحائط.
	تأكد من توصيل الغسالة بمأخذ أرضي لمنع حدوث صدمة كهربائية.
	اتصل بمركز الخدمة للمساعدة.
	ملاحظة

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.
لذا الرجاء اتباعها بعناية.
بعد الاطلاع على هذه الدليل، قم بحفظه في مكان آمن للاستناد إليه كمرجع في المستقبل.

اقرأ كافة التعليمات أولاً قبل استخدام الجهاز.

نظرًا لاحتمال التعرض للمخاطر كما هو الحال مع كافة الأجهزة الكهربائية وأجزائها المتحركة. ولتشغيل هذا الجهاز بأمان، يجب عليك التعرف على طريقة تشغيله وتوخي الحذر عند استخدامه.

قم بتركيب الغسالة ووضعها في مكان مغلق، بحيث لا تتعرض لعوامل الطقس.

قم بتركيب الغسالة وجعلها مستوية على أرضية تتحمل وزنها.

يجب توصيل الغسالة بمأخذ أرضي بشكل صحيح. ولا تقم بتوصيلها بأحد المآخذ غير الأرضية.

WD8704CJ-02732A-02_AR.indd 4 4/30/2010 3:07:08 PM

لتقليل مخاطر حدوث حريق أو انفجار:

تنبيه

- لا تقم بغسل الملابس التي تم غسلها أو نقعها أو التعامل معها باستخدام الجازولين أو مذيبات التنظيف الجاف أو المواد الأخرى القابلة للاشتعال أو الانفجار. لأنها تحدث أبخرة يمكن أن تشتعل أو تنفجر. قم بشطف أية ملابس تعرضت لمذيبات تنظيف أو أية سوائل أو مواد صلبة أخرى قابلة للاشتعال يدوياً قبل وضعها في الغسالة. تأكد من التخلص من كافة آثار تلك المواد السائلة والصلبة والأبخرة. تتضمن المواد الخطرة الأسيتون، والمواد الكحولية، والجازولين، والكيروسين، وبعض المنظفات المنزلية السائلة، ومزيلات البقع، والزيوت التربنتينة، والشمع، ومزيلات الشمع.
- لا تضع الجازولين، أو مذيبات التنظيف الجاف، أو أية مواد أخرى قابلة للاشتعال أو الانفجار في الغسالة.
- قد يتكون غاز الهيدروجين في نظام الماء الساخن في ظروف معينة - كما هو الحال بالنسبة لسخان الماء الساخن الخاص بك - الذي لم يُستخدم لمدة أسبوعين أو أكثر. غاز الهيدروجين قابل للانفجار. وفي حالة عدم استخدام نظام الماء الساخن لمدة أسبوعين أو أكثر، قم بفتح كافة صنابير الماء الساخن الموجودة في المنزل، ودع الماء يتدفق لبضعة دقائق قبل استخدام الغسالة. مما يعمل ذلك على التخلص من غاز الهيدروجين المتكون داخل الصنابير. ولا تقم بالتدخين أو إشعال أي مصدر لهب مفتوح في ذلك الوقت، نظراً لأن غاز الهيدروجين قابل للاشتعال.

قم بالتهوية على الفور دون لمس القابس في حالة تسرب الغاز.

قم بفصل سلك الطاقة قبل الشروع في صيانة تشغيل الغسالة.

قم بتفريغ جيوب الملابس قبل كل غسلة. حيث يمكن أن تتسبب الأشياء الصغيرة والصلبة ذات الأشكال غير المنتظمة مثل العملات المعدنية والشفرات والدبابيس وماسكات الورق في تلف الغسالة. لا تقم بغسل الملابس المزودة بإبزيمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

لا تفتح باب الغسالة في حالة وجود الماء داخل الغسالة. تأكد من أنه قد تم تصريف الماء قبل فتح الباب.

لا تقم بإصلاح أي جزء من الغسالة أو استبداله أو صيانته بنفسك إلا في حالة استيعابك الكامل لإرشادات الإصلاح المُوصى بها بالنسبة للمستخدم وتوفر المهارات اللازمة لتنفيذها. قد تؤدي عملية الإصلاح من قِبل شخص غير معتمد إلى إلغاء الضمان.

قم بتوصيل الغسالة بمصادر المياه الرئيسية باستخدام مجموعة خراطيم جديدة. لا تعيد استخدام مجموعة الخراطيم القديمة.

تتأثر خراطيم صنبور الماء بمرور الوقت. لذا يجب فحص الخراطيم بشكل دوري لمعرفة الانتفاخات أو الالتواءات أو مناطق القطع أو التآكلات أو التسريبات، واستبدالها حسبما تقتضي الحاجة، كل خمس سنوات على الأقل.

يجب إزالة جميع مسامير التعبئة والشحن قبل تشغيل الجهاز. حيث قد تحدث أضرارًا خطيرة في حالة عدم إزالتها. راجع الجزء "إزالة مسامير الشحن" في صفحة ١٢.

قبل غسل الملابس للمرة الأولى، يجب تشغيل الغسالة دورة كاملة دون ملابس.
راجع "الغسيل للمرة الأولى".

WD8704CJ-02732A-02_AR.indd 5 4/30/2010 3:07:08 PM

معلومات السلامة

تم تصميم الجهاز للاستخدام المنزلي فقط.

تنبيه

تأكد من قيام فنيين مؤهلين بإجراء توصيلات الماء والكهرباء، مع مراعاة التعليمات الموضحة في دليل المستخدم (راجع "تركيب الغسالة") وقوانين السلامة المحلية.

قم بفصل قابس الجهاز من منفذ التيار الكهربائي قبل تنظيفه أو صيانته.

افصل قابس الجهاز دومًا من منفذ التيار الكهربي وأغلق صنبور الماء بعد الانتهاء من استخدامها.

تأكد من تفريغ جيوب الملابس التي سيتم غسلها.

قد تتسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو البراغي أو الأحجار في إحداث أضرار بالغة بالجهاز.

لا تدع الحيوانات الأليفة والأطفال يلعبون فوق الغسالة أو بداخلها. فقد يلحق ذلك بهم ضرراً أو يؤدي إلى اختناقهم.

يصبح الباب الزجاجي ساخنًا جدًا أثناء دورة الغسيل. لذا، لا تقم بلمس الباب الزجاجي أثناء الاستخدام.

لا تحاول إصلاح الجهاز بنفسك. فقد تؤدي عمليات الإصلاح من قِبل أفراد غير فنيين أو غير مؤهلين إلى حدوث إصابات و/أو إحداث المزيد من الخلل بالجهاز.

في حالة تلف قابس الجهاز (سلك التيار الكهربائي)، يجب تغييره من قِبل الشركة المصنّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتفادي التعرض لأي خطر.

يجب صيانة هذا الجهاز من قِبل مركز الخدمة المعتمد التابع لنا، ويجب تبديل قطع الغيار بقطع غيار أصلية فقط.

تنبيه

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون فوق الغسالة أو بداخلها. لا يمكن فتح باب الغسالة بسهولة من الداخل، وقد يصاب الأطفال بإصابات بالغة في حالة احتباسهم بداخلها.

تنبيه

لم يتم تصنيع هذا الجهاز حتى يُستخدم من قِبل أشخاص لديهم مشكلات جسمانية وعقلية وشعورية (بما فيهم الأطفال) أو نقص في المعرفة أو الخبرة، إلا تحت إشراف أو تعليمات بخصوص استخدامه من قِبل الشخص المسؤول عن سلامتهم.

يجب مراقبة الأطفال لضمان عدم عبثهم بالغسالة.

يجب أن يكون المستخدم على دراية بالتعليمات الخاصة بتشغيل الغسالة وأن يتوخي بالغ الحذر والحيطة عند استخدامها بصفه دائمة حتى يتسنى له استخدامها بشكل آمن.

يجب وضع الجهاز بالقرب من مأخذ التيار الكهربائي، وصنابير توريد الماء وخراطيم تصريف الماء بحيث يسهل الوصول إليها.

تنبيه

قد تشكل مواد التعبئة خطورة على الأطفال؛ لذا احتفظ بكافة مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة البوليستيرين...الخ) بعيداً عن متناول الأطفال.

يُحظر استخدام الماء المعالج الذي يحتوي على زيوت أو كريمات أو مستحضرات، والذي يكون في الغالب موجودًا في المستحضرات الجلدية أو عيادات التدليك.

- وإلا سيؤدي هذا إلى إتلاف التغليف وهو ما يؤدي بدوره إلى حدوث خلل أو تسرب الماء.

WD8704CJ-02732A-02_AR.indd 6 4/30/2010 3:07:09 PM

وبالنسبة لأنبوب الغسيل الداخلي فهو مصنوع بحيث يكون مضاداً للصدأ. ولكن في حالة ترسب بعض المعادن الصغيرة مثل دبابيس الشعر في ذلك الأنبوب لفترة زمنية طويلة، فقد يتعرض الأنبوب للصدأ نتيجة لذلك.

- يُحظر أيضاً ترك الماء الذي يحتوي على الكلور أو أي مواد كيميائية في الأنبوب لفترة زمنية طويلة.
- يُحظر استخدام الماء الذي يحتوي على المعادن بصورة منتظمة أو تركه في الأنبوب لفترة زمنية طويلة. وفي حالة ظهور الصدأ على سطح الأنبوب، يُفضل تنظيف سطح الأنبوب باستخدام سائل تنظيف (عادي) واستخدام قطعة قماش ناعمة أو قطعة إسفنج في تنظيفه. (يُحظر بأي حال من الأحوال استخدام فرشاة معدنية في التنظيف)

يجب عدم استخدام المجفف في حالة استخدام مواد كيميائية للتنظيف.

بالنسبة للغسالات التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد أو أية عوائق أخرى لهذه الفتحات.

استخدام مجموعة خراطيم جديدة ولا تعيد استخدام الخراطيم القديمة.

WD8704CJ-02732A-02_AR.indd 7 4/30/2010 3:07:09 PM

المحتويات

إعداد الغسالة ٩

٩

٩ **فحص الأجزاء**
١٠ **استيفاء متطلبات التركيب**
١٠ مصدر الطاقة الكهربائية والتوصيل الأرضي
١٠ توريد الماء
١١ تصريف
١١ سطح الأرضية
١١ درجة الحرارة المحيطة
١١ تركيب القنطرة أو الخزانة
١١ **تركيب الغسالة**

غسيل الملابس ١٧

١٧

١٧ **الغسيل للمرة الأولى**
١٧ **إرشادات أساسية**
١٨ **استخدام لوحة التحكم**
٢٠ التأمين ضد عبث الأطفال
٢٠ إيقاف تشغيل الصوت
٢٠ تأجيل التوقف
٢٠ وظيفة التصريف فقط
٢١ غسيل بالهواء
٢٢ **استخدام دورة التجفيف**
٢٣ غسيل الملابس باستخدام قرص تحديد الدورة
٢٣ غسيل الملابس يدوياً
٢٤ **دليل غسيل الملابس**
٢٥ **معلومات حول مسحوق الغسيل والمواد الإضافية**
٢٥ ما هو مسحوق الغسيل الذي يمكنك استخدامه
٢٥ درج مسحوق الغسيل

تنظيف الغسالة وصيانتها ٢٦

٢٦

٢٦ **تصريف الماء من الغسالة عند الطوارئ**
٢٦ **تنظيف الأسطح الخارجية**
٢٧ **تنظيف درج مسحوق الغسيل والجزء الداخلي منه**
٢٧ **تنظيف مصفاة المخلفات**
٢٨ **تنظيف المصفاة الشبكية المتصلة بخرطوم الماء**
٢٨ **إصلاح جهاز غسالة متجمد**
٢٨ **تخزين الغسالة**

استكشاف المشاكل وحلها ورموز المعلومات ٢٩

٢٩

٢٩ **تحقق مما يلي إذا كانت الغسالة...**
٣٠ **رموز المعلومات**

جدول الدورة ٣١

٣١

٣١ **جدول الدورة**

الملحق ٣٢

٣٢

٣٢ **جدول العناية بالأقمشة**
٣٢ **حماية البيئة**
٣٢ **إعلان التوافق**
٣٣ **المواصفات**

WD8704CJ-02732A-02_AR.indd 8 4/30/2010 3:07:09 PM

إعداد الغسالة

تأكد من اتباع متخصص التركيبات لهذه الإرشادات بدقة كي تعمل الغسالة بشكل صحيح ولتفادي حدوث إصابات أثناء الغسيل.

فحص الأجزاء

أخرج الغسالة بحرص من الصندوق وتأكد من وجود كافة الأجزاء الموضحة أدناه. في حالة تلف الغسالة أثناء عملية الشحن، أو عدم استلامك لكافة الأجزاء، قم بالاتصال بخدمة عملاء Samsung أو الموزع المعتمد لدى Samsung.

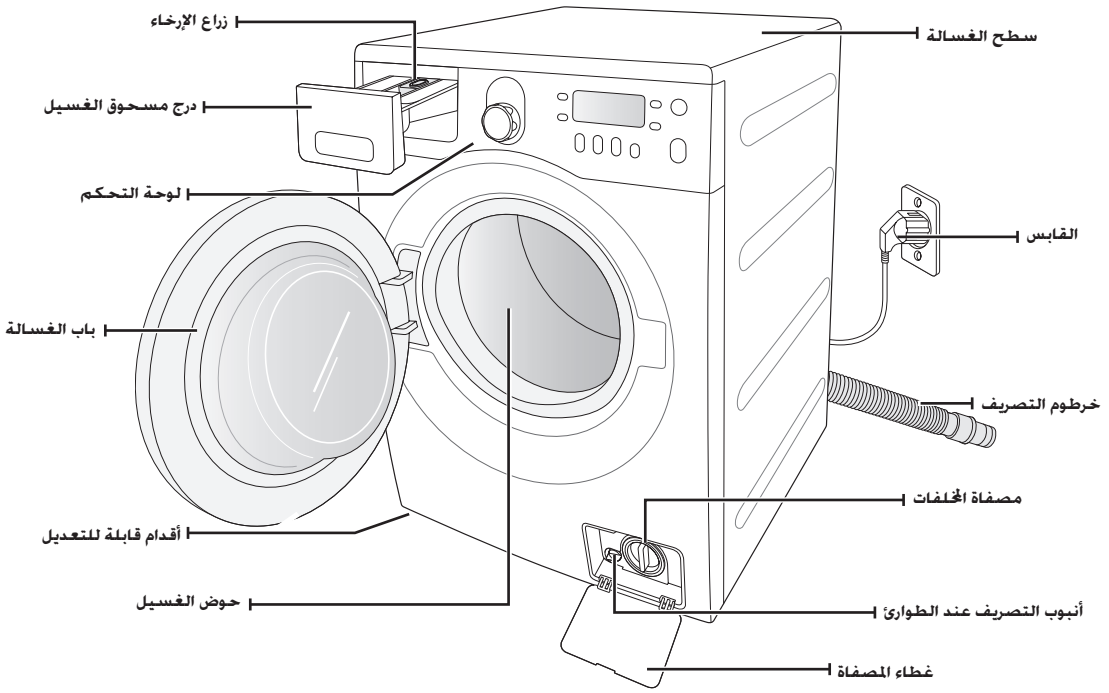

الصواميل • أغطية فتحات المسامير خرطوم توريد الماء حامل الخرطوم

• **أغطية فتحات المسامير** : يعتمد عدد أغطية فتحات المسامير على حسب الطراز (من ٣ إلى ٥ أغطية).

WD8704CJ-02732A-02_AR.indd 9 4/30/2010 3:07:13 PM

إعداد الغسالة

استيفاء متطلبات التركيب

مصدر الطاقة الكهربائية والتوصيل الأرضي

لتفادي خطر حدوث حريق أو التعرض لصدمة كهربائية أو إصابة جسدية، يجب أن تتم عملية توصيل الأسلاك والتوصيل الأرضي وفقًا لأحدث نسخة من اللائحة الوطنية للكهرباء ANSI/FNPA، رقم ٧٠ والقوانين والضوابط المحلية. يقع على عاتق مالك هذا الجهاز مسؤولية توفير الصيانة الكهربائية الكافية.

تحذير
- ممنوع استخدام كبلات إضافية.
- استخدم سلك التيار الكهربائي المرفق مع الغسالة فقط.

عند الإعداد لعملية التركيب، تأكد أن سلك التيار الكهربائي يوفر:
- قاطع دائرة كهربائية أو صمام كهربائي بقدره ٢٢٠ فولت ~ ٢٤٠ فولت و ٥٠ هرتز و ١٥ أمبير
- دائرة كهربائية فرعية لتشغيل الغسالة فقط

يجب توصيل الغسالة بمأخذ أرضي بشكل صحيح. وفي حالة حدوث خلل أو تعطل في الأداء، يعمل التوصيل الأرضي على تقليل خطورة التعرض لصدمة كهربائية وذلك بتوفير مسار أقل مقاومة للتيار الكهربائي.
يتم تزويد الغسالة بسلك تيار كهربائي به ثلاثة قوابس شوكية أرضية لاستخدامها بشكل صحيح في المقبس الأرضي المُركب بشكل صحيح.

لا تقم بتوصيل السلك الأرضي بخطوط مواسير السباكة البلاستيكية، أو خطوط الغاز، أو مواسير الماء الساخن.

فقد يؤدي التوصيل غير الصحيح للموصل الأرضي الخاص بالغسالة إلى حدوث صدمة كهربائية.
استشر فني كهربائي مؤهل أو فني صيانة إذا لم تكن متأكداً من صحة التوصيل الأرضي للغسالة. يحظر استخدام قابس آخر غير المرفق مع الغسالة. وفي حالة عدم ملاءمته مع مأخذ التيار، استعن بفني كهربائي مؤهل لتركيب مأخذ مناسب.

توريد الماء

يتم ملء الغسالة بشكل سليم عندما يكون ضغط الماء ٥٠ ~ ٨٠٠ كيلوباسكال. قد يتسبب ضغط الماء الأقل من ٥٠ كيلوباسكال في تلف صمام الماء مما يؤدي إلى عدم السماح بإغلاقه كليةً. أو قد تستغرق الغسالة وقتًا أطول مما تسمح به عناصر التحكم لملئها، مما ينتج عنه إيقاف تشغيل الغسالة. (تم تضمين نظام تحديد وقت ملء الغسالة في عناصر التحكم والذي تم تصميمه للحد من عمليات تدفق/فيضان الماء في حالة ارتخاء الخرطوم الداخلي.)
يجب أن تكون صنابير الماء على بُعد ٤ أقدام (١٢٢ سم) من الجانب الخلفي للغسالة لتسهيل وصول خراطيم صنابير الماء المرفقة إلى الغسالة.

تقوم معظم متاجر توريد المواسير ببيع خراطيم صنابير الماء بمختلف أطوالها التي تصل إلى ١٠ أقدام (٣٠٥ سم).

يمكنك تقليل مخاطر تسرب الماء أو تلوثه عن طريق:
- تيسير وصول الخراطيم إلى صنابير الماء.
- إغلاق الصنابير في حالة عدم تشغيل الغسالة.
- قم بفحص دوري للتأكد من أن مثبتات الخرطوم تسرب الماء.

تحذير
قم بفحص كافة التوصيلات الموجودة في صمام وصنابير الماء للتحقق ما إذا كانت هناك أية تسريبات قبل استخدام الغسالة للمرة الأولى.

WD8704CJ-02732A-02_AR.indd 10 4/30/2010 3:07:13 PM

تصريف

توصي Samsung باستخدام ماسورة رأسية يصل ارتفاعها إلى ١٨ بوصة (٤٦ سم). يجب توجيه خرطوم التصريف باستخدام مشبك خرطوم التصريف إلى اتجاه الماسورة الرأسية. يجب أن تكون الماسورة الرأسية كبيرة بدرجة كافية لإدخال القطر الخارجي لخرطوم التصريف. يقوم المصنع بإرفاق خرطوم التصريف.

سطح الأرضية

يجب تثبيت الغسالة على سطح ثابت وصلب للحصول على أفضل أداء. قد تحتاج الأسطح الخشبية إلى تقويتها لتقليل الاهتزاز و/أو الأحمال غير المتزنة. يكون السجاد وأسطح البلاط الناعمة بمثابة عوامل مساهمة في عمليات الاهتزاز واحتمالية تحرك الغسالة بشكل طفيف أثناء دورة التنشيف.
لا تقم بتركيب الغسالة على أرضية أو بنية ضعيفة.

درجة الحرارة المحيطة

لا تقم بتركيب الغسالة في مناطق قد يتجمد فيها الماء، حيث أن الغسالة تحتفظ دومًا ببعض الماء في صمام الماء والمضخة وأجزاء من الخرطوم. يمكن أن يتسبب الماء المتجمد الموجود في المواسير في إلحاق ضرر بالأحزمة والمضخة والمكونات الأخرى.

تركيب القنطرة أو الخزانة

لتشغيل الغسالة بشكل آمن وسليم، يجب توفير الحد الأدنى من المساحات بالنسبة إلى ما يلي:

الجوانب - ٢٥ مم　　الجانب الخلفي - ٥١ مم

الجانب العلوي - ٢٥ مم　　الجانب الأمامي - ٤٦٥ مم

في حالة تركيب الغسالة والمجفف معاً، يجب أن يكون بالجانب العلوي للقنطرة أو الخزانة فتحة هواء خالية قدرها ٤٦٥ مم على الأقل.
لا تتطلب الغسالة وحدها فتحة هواء بعينها.

تركيب الغسالة

الخطوة رقم ١

اختيار مكان الغسالة

قبل تركيب الغسالة، تأكد من توفر ما يلي في المكان الذي قمت باختياره:

- سطح صلب ومستوي دون وجود سجاد أو بلاط قد يعوق عملية التهوية
- مكان بعيد عن أشعة الشمس المباشرة
- تتوفر به تهوية كافية
- لا يصل إلى مرحلة التجمد (أقل من ٣٢ درجة فهرنهايت أو ٠ درجة مئوية)
- يكون بعيدًا عن مصادر الحرارة مثل البترول أو الغاز
- تتوفر به مساحة كافية حتى لا يتم وضع الغسالة على سلك الطاقة

WD8704CJ-02732A-02_AR.indd 11　4/30/2010 3:07:13 PM

إعداد الغسالة

الخطوة رقم ٢

إزالة مسامير الشحن

قبل تثبيت الغسالة . يجب إزالة جميع مسامير الشحن من الجزء الخلفي للوحدة.

١. قم بفك جميع المسامير بواسطة مفتاح الربط المرفق مع الجهاز.

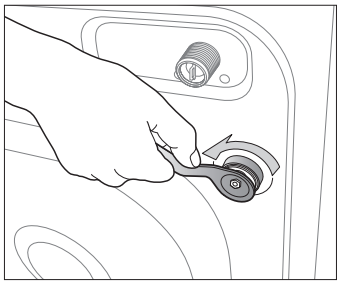

٢. امسك الصواميل بواسطة مفتاح الربط واسحبها من خلال الجزء العريض للفتحة. كرر ذلك لإزالة كل مسمار.

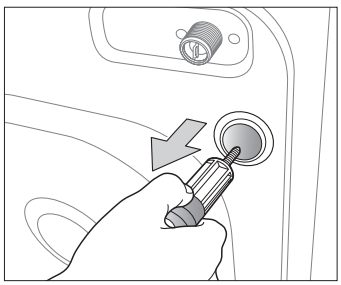

٣. قم بتغطية جميع الفتحات باستخدام الأغطية البلاستيكية المرفقة مع الجهاز.

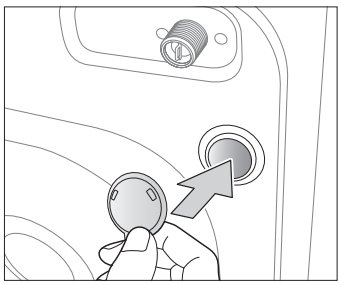

٤. قم بحفظ صواميل الشحن في مكان بعيد آمن حيث قد تحتاج إلى نقل الغسالة إلى مكان آخر في المستقبل.

⚠ تنبيه

قد تشكل مواد التعبئة خطورة على الأطفال؛ لذلك احتفظ بكافة مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة البوليستيرين...الخ) بعيداً عن متناول الأطفال.

WD8704CJ-02732A-02_AR.indd 12 4/30/2010 3:07:15 PM

الخطوة رقم ٣

ضبط استواء أرجل الغسالة

عند تركيب الغسالة، تأكد من توصيل سلك الطاقة وخرطوم توريد الماء وخرطوم التصريف بسهولة.

١. ضع الغسالة في المكان المحدد.

٢. اجعل الغسالة مستوية عن طريق لف الأقدام المساوية إلى الداخل والخارج يدويًا كما هو مطلوب.

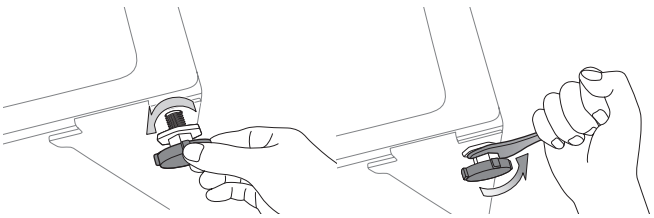

٣. عند استواء الغسالة، أحكم ربط الصماويل باستخدام مفتاح الربط المرفق مع الغسالة.

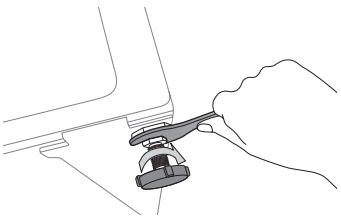

الخطوة رقم ٤

توصيل الماء والخرطوم

توصيل خرطوم تزويد الماء

١. استخدم مثبت الذراع الذي على شكل حرف L الخاص بخرطوم توريد الماء البارد ووصله إلى مدخل توريد الماء البارد الموجود في الجانب الخلفي من الغسالة. وأحكم ربطه يدويًا.

يجب توصيل أحد طرفي خرطوم توريد الماء بالغسالة وتوصيل الطرف الآخر للخرطوم بصنبور الماء. لا تجذب خرطوم توريد الماء. إذا كان الخرطوم قصيراً للغاية، استبدله بخرطوم أطول يتحمل الضغط العالي.

٢. صل الطرف الآخر لخرطوم توريد الماء البارد بصنبور الماء البارد وأحكم تثبيته يدويًا. يمكنك، إذا لزم الأمر، إعادة توصيل خرطوم الماء بالغسالة من خلال إرخاء مثبت الخرطوم ولفه وإعادة ربطه بإحكام.

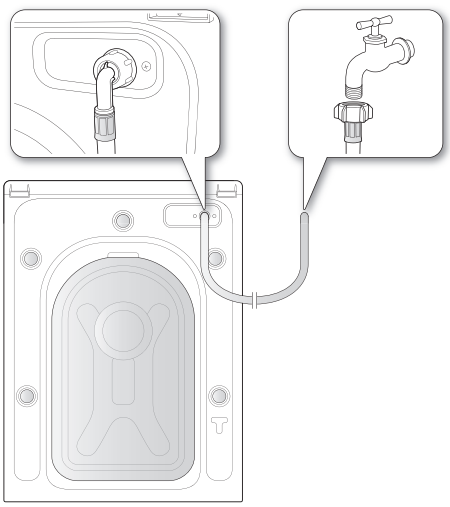

بالنسبة للطرازات المحددة المزودة بمدخل إضافي لتوريد الماء الساخن:

١. استخدم مثبت الذراع الذي على شكل L الأحمر الخاص بخرطوم توريد الماء الساخن ووصله إلى مدخل توريد الماء الساخن الموجود في الجانب الخلفي من الغسالة. وأحكم ربطه يدويًا.

٢. صل الطرف الآخر لخرطوم توريد الماء الساخن بصنبور الماء الساخن وأحكم تثبيته يدويًا.

٣. استخدم قطعة على شكل حرف Y إذا أردت استخدام الماء البارد فقط.

WD8704CJ-02732A-02_AR.indd 13 4/30/2010 3:07:18 PM

إعداد الغسالة

توصيل خرطوم توريد الماء (طرازات معينة)

١. قم بإزالة المحول من خرطوم تزويد الماء.

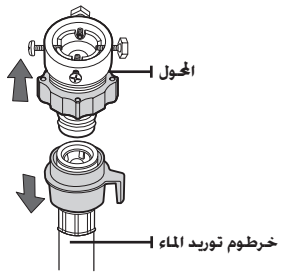

٢. أولاً، باستخدام مفك براغي من نوع "+"، قم بخلخلة المسامير الأربعة الموجودة بالمحول. ثم أخرج المحول واجعل الجزء (٢) باتجاه السهم حتى تتواجد مسافة مقدارها ٥ مم بينهما.

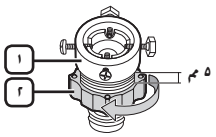

٣. قم بتوصيل المحول بصنبور الماء عن طريق ربط المسامير بإحكام مع ترك المحول يتدلى إلى أسفل.
اجعل الجزء (٢) باتجاه السهم ووصل (١) و (٢).

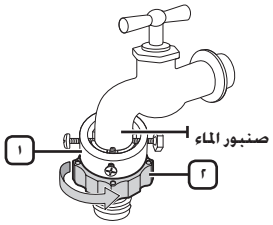

٤. صل خرطوم تزويد الماء بالمحول. عند إرخاء الجزء (٣)، يتصل الخرطوم بالمحول تلقائياً محدثاً صوت.

بعد توصيل خرطوم توريد الماء بالمحول، تأكد من توصيله بشكل صحيح عن طريق سحب خرطوم توريد الماء لأسفل.

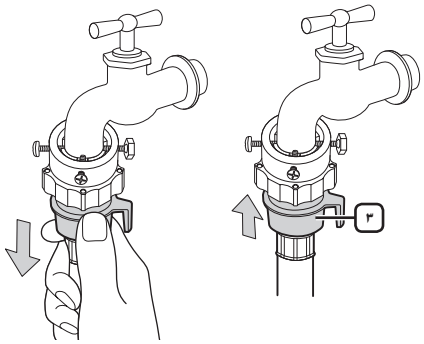

٥. قم بتوصيل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود بالجانب الخلفي من الغسالة. لف خرطوم توريد الماء في اتجاه عقارب الساعة.

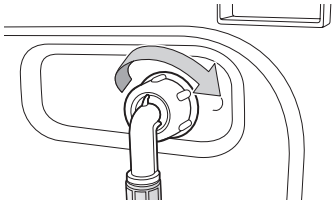

WD8704CJ-02732A-02_AR.indd 14 4/30/2010 3:07:23 PM

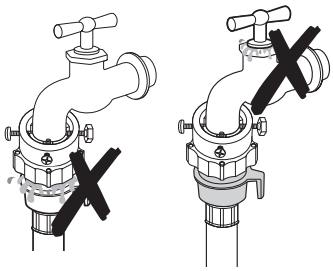

٦. قم بتشغيل مصدر توريد الماء وتأكد من عدم وجود تسريبات من صمام الماء أو الصنبور أو المحول. قم بتكرار الخطوات السابقة. في حالة تسريب الماء.

⚠ تحذير

لا تستخدم الغسالة في حالة تسريب الماء. فقد يتسبب ذلك في حدوث صعقة كهربائية أو إصابة جسدية.

- إذا كان صنبور الماء من نوع برغي. صل خرطوم توريد الماء إلى الصنبور كما هو مبين.

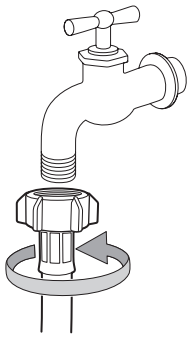

استخدم صنبور من النوع العادي لتوريد الماء. إذا كان الصنبور مربعاً أو كبيراً جداً. أزل الحلقة الفاصلة قبل إدخال الصنبور في المحول.

WD8704CJ-02732A-02_AR.indd 15 4/30/2010 3:07:24 PM

إعداد الغسالة

توصيل خرطوم التصريف

يمكنك وضع نهاية خرطوم التصريف بثلاث طرق:

١. **فوق حافة حوض الغسيل:** يجب وضع خرطوم التصريف على ارتفاع يتراوح بين ٦٠ و٩٠ سم. للإبقاء على انثناء خرطوم التصريف، استخدم ماسك الخرطوم البلاستيكي المرفق. ثبت الماسك على الجدار بواسطة خطاف أو ثبته في الصنبور بواسطة سلك أو حبل لمنع سقوط خرطوم التصريف على الأرض.

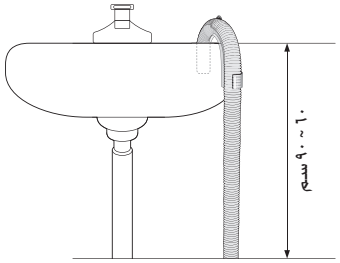

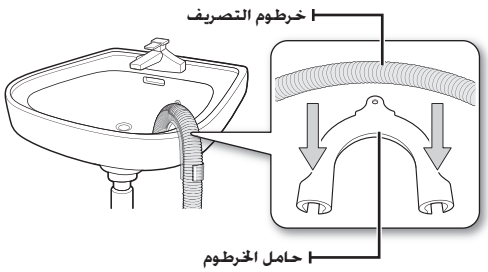

٢. **في فرع أنبوب تصريف الحوض:** يجب أن يكون فرع أنبوب التصريف فوق سباكة الحوض بحيث يكون طرف الخرطوم على ارتفاع ٦٠ سم على الأقل عن الأرض.

٣. **في أنبوب تصريف:** توصي Samsung باستخدام أنبوب عمودي على ارتفاع ٦٥ سم؛ على ألا يقل طوله عن ٦٠ سم ولا يزيد عن ٩٠ سم.

يتطلب خرطوم تصريف الماسورة الرأسية؛

- بحد أدنى لقطر الدائرة ٥ سم.
- الحد الأدنى لسعة الجرف ٦٠ متر في الدقيقة.

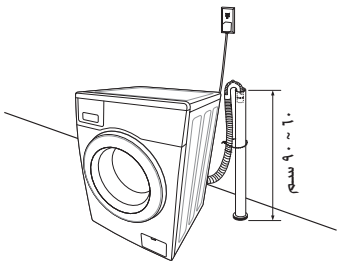

الخطوة رقم ٥

تشغيل الغسالة

قم بتوصيل سلك التيار الكهربائي بحيث يكون منفذ تيار كهربائي معتمد وبقدرة ٢٣٠ فولت ٥٠ هرتز محمي بصمام كهربائي ١٥ أمبير أو قاطع دائرة كهربائية مماثل له. (لمزيد من المعلومات حول متطلبات التوصيل الكهربائي والتوصيل الأرضي، راجع صفحة رقم ١٠.)

WD8704CJ-02732A-02_AR.indd 16 4/30/2010 3:07:28 PM

غسيل الملابس

مع الغسالة الجديدة من Samsung، يقوم الجزء الأكثر صلابة بتحديد الكمية التي يجب غسلها أولاً.

الغسيل للمرة الأولى

قبل غسل الملابس للمرة الأولى، يجب تشغيل الجهاز دورة كاملة (أي بدون ملابس).

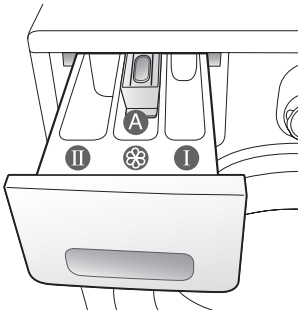

١. اضغط على زر **Power (طاقة)**.
٢. أضف كمية قليلة من مسحوق الغسيل في الجزء المخصص له Ⅱ في درج مسحوق الغسيل.
٣. قم بتزويد الغسالة بالماء.
٤. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

يؤدي ذلك إلى إزالة الماء المتبقي في الغسالة نتيجة التشغيل الاختباري الذي قامت به الشركة المصنعة للجهاز.

حجيرة Ⅰ : مسحوق للغسيل الأولي أو النشا.
حجيرة Ⅱ : مسحوق الغسيل لدورة الغسل الرئيسية ومواد تنقيه الماء ومواد ما قبل النقع ومادة التبييض ومواد إزالة البقع.
حجيرة ❀ : المواد الإضافية، مثل مكون أو منعم الأقمشة (لا تتجاوز الحافة السفلية (الحد الأقصى) لـ "A")

إرشادات أساسية

١. قم بوضع الملابس في الغسالة.

تحذير: لا تتجاوز الوزن المحدد للغسالة. لتحديد سعة الوزن لنوع الملابس التي ترغب في غسلها، راجع الجدول الموجود في صفحة رقم ٢٤.

- تأكد أن الملابس غير عالقة بالباب، حيث قد يؤدي ذلك إلى تسرب الماء.
- قد يتبقى مسحوق الغسيل في الجزء المطاطي الأمامي للغسالة بعد دورة الغسيل. قم بإزالة أي مسحوق متبقي، لأن ذلك قد يسبب تسرب الماء.
- لا تقم بغسل العناصر العازلة للماء.

٢. أغلق الباب حتى يثبت.
٣. قم بتشغيل الغسالة.
٤. قم بإضافة المسحوق والمواد الإضافية إلى درج التوزيع.
٥. حدد الدورة والخيارات المناسبة لكمية الملابس التي تم إضافتها.
سيضيء مؤشر الغسيل وسيظهر وقت الدورة المحدد على الشاشة.
٦. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

WD8704CJ-02732A-02_AR.indd 17 4/30/2010 3:07:31 PM

غسيل الملابس

استخدام لوحة التحكم

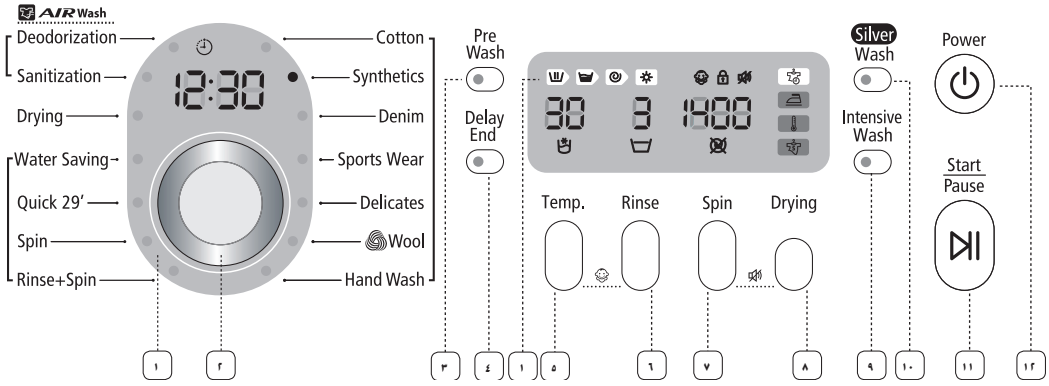

١ لوحة العرض الرسومية الرقمية	تعرض الوقت المتبقي لدورة الغسيل وكافة المعلومات الخاصة بالدورة ورسائل الخطأ.
٢ قرص تحديد الدورة	اختيار نوع التدوير وسرعة التنشيف للدورة. لمزيد من المعلومات، راجع "غسيل الملابس باستخدام قرص تحديد الدورة". (راجع صفحة ٢٣) **Cotton (قطن)** - أو الملابس القطنية وأغطية السرير والمفارش الكتانية، والملابس الداخلية والمناشف والقمصان متوسطة أو خفيفة الاتساخ...الخ **Synthetics (اصطناعي)** - البلوزات والقمصان متوسطة أو خفيفة الاتساخ وغيرها من الملابس المصنوعة من البوليستر (الديولين والتريفيرا) ومادة البوليامايد (البيرلون والنيلون) أو الأنسجة الصناعية الأخرى المشابهة. **Denim (الجينز)** - يضمن وجود مستوى ماء أعلى في دورة الغسيل الأساسية والشطف الإضافي عدم وجود أي بقايا من مسحوق الغسيل في ملابسك. **Sports Wear (ملابس رياضية)** - الملابس المقاومة للماء أو ذات الطبقة العازلة للمحافظة على نظافة وجمال مظهرها. **Delicates (أنسجة رقيقة)** - الأقمشة الخفيفة وحمالات الصدر والملابس النسائية والفساتين والقمصان والبلوزات. للحصول على أفضل النتائج، استخدم مسحوقًا سائلاً. **Wool (صوف)** - تستخدم هذه الدورة لغسل الملابس الصوفية التي يسمح بوضعها في الغسالة فقط. يجب أن تقل الحمولة عن ٢,٠ كجم. • تعمل دورة Wool (الصوف) على غسيل الملابس باستخدام حركات اهتزازية خفيفة. أثناء عملية الغسيل، تستمر عمليتا الاهتزاز الخفيف والنقع لحماية الألياف الصوفية من الانكماش / التلف وللحصول على نظافة فائقة بسهولة. لا تعد عملية التوقف هذه مشكلة. • يُنصح باستخدام مسحوق تنظيف عادي لدورة Wool (الصوف)، للحصول على نتائج غسيل رائعة ولعناية فائقة بالألياف الصوفية. تم اعتماد دورة غسيل الملابس الصوفية في هذه الغسالة من قِبل Woolmark لغسيل منتجات Woolmark التي يمكن وضعها في الغسالة شريطة أن يتم غسيل المنتجات وفقاً للتعليمات الواردة في الملصق الموجود على الملابس والتعليمات الصادرة من الشركة المصنّعة لهذه الغسالة M0509. (رقم الشهادة الصادرة عن شركة IWS NOM INEE المحدودة) **Handwash (غسيل يدوي)** - دورة غسيل بسيطة كما لو كنت تغسل الملابس باليدين. **Air Wash (الغسيل بالهواء)** - تُعد هذه الدورة ملائمة لإزالة الروائح الكريهة. قم بلف قرص اختيار الدورة للتبديل بين أوضاع التشغيل التالية. (Deodorization (إزالة الروائح الكريهة) ← Sanitization (التعقيم)) • Deodorization (إزالة الروائح الكريهة) - تعمل على إزالة الروائح الكريهة من الغسيل • Sanitization (التعقيم) - يقوم بإزالة الروائح الكريهة وتعقيم الغسيل عن طريق إجراء الغسيل بالهواء درجة حرارة عالية. **Drying (تجفيف)** - حدد خيار تجفيف الغسيل تلقائيًا عن طريق التعرف على كمية الغسيل ووزنه.

WD8704CJ-02732A-02_AR.indd 18 4/30/2010 3:07:33 PM

	Water Saving (توفير الماء) - لقد تم تصميم هذه الدورة خصيصًا لتمكينك من غسل الملابس بفاعلية بأقل كمية من الماء. يوصى باختيار دورة Water Saving (توفير الماء)، مع درجة حرارة ٤٠ درجة مئوية وغسيل/تجفيف مكثف وتجفيف بسرعة ١٤٠٠ لفة في الدقيقة لحمولة الملابس القطنية متوسطة الاتساخ. **Quick 29' (29' سريع)** - للملابس خفيفة الاتساخ التي تحتاجها بسرعة. **Spin (تنشيف)** - إجراء دورة تجفيف إضافية لإزالة المزيد من الماء. **Rinse + Spin (شطف + تنشيف)** - للملابس التي تحتاج إلى الشطف فقط أو لإضافة منعم الأقمشة الذي يتم إضافته أثناء الشطف فقط. **للتصريف فقط** - قم بلف **قرص اختيار الدورة** إلى وضع تنشيف. اضغط على زر **Spin (تنشيف)** ثم اضغط على زر **Start/Pause (تشغيل/إيقاف مؤقت)** لتصريف المياه.
٣ **زر تحديد PREWASH (غسيل أولي)**	اضغط على هذا الزر لتحديد غسيل أولي. وتتوفرخاصية الغسيل الأولي مع الدورات التالية فقط: Cotton (قطن) و Synthetics (اصطناعي) و Sports Wear (ملابس رياضية) و Water Saving (توفير الماء).
٤ **زر تحديد DELAY END (تأجيل التوقف)**	اضغط على هذا الزر بشكل متكرر للتبديل بين خيارات خاصية تأجيل التوقف المتوفرة (من ٣ ساعات إلى ١٩ ساعة بواقع زيادة ساعة واحدة). تشير الساعة المعروضة إلى وقت انتهاء دورة الغسيل.
٥ **زر تحديد TEMPERATURE (درجة الحرارة)**	اضغط على هذا الزر بشكل متكرر للتبديل بين خيارات درجة حرارة الماء المتوفرة: (ماء بارد ٣٠° مئوية و ٤٠° مئوية و ٦٠° مئوية و ٩٥° مئوية).
٦ **زر تحديد RINSE (الشطف)**	اضغط على هذا الزر لإضافة دورات شطف إضافية. الحد الأقصى لعدد دورات الشطف هو خمسة.
٧ **زر تحديد SPIN (تنشيف)**	اضغط على هذا الزر بشكل متكرر للتبديل بين سرعات دورة التجفيف المتوفرة. WD8704: ⊗, ٤٠٠, ٨٠٠, ١٢٠٠, ١٤٠٠ لفة في الدقيقة WD8702: ⊗, ٤٠٠ و ٨٠٠ و ١٢٠٠ و ١٤٠٠ لفة في الدقيقة WD8700: ⊗, ٤٠٠ و ٦٠٠ و ٨٠٠ و ١٠٠٠ لفة في الدقيقة "**بدون تنشيف** ⊗" - تبقى الملابس في الحاوية دون تشغيل دورة التجفيف بعد تصريف الماء النهائي. "**إيقاف الشطف**" - يبقى الغسيل منقوعًا في الماء أثناء عملية الشطف الأخيرة. يجب تشغيل دورة تصريف أو تنشيف قبل أن تتمكن من إخراج الملابس.
٨ **زر تحديد DRYING (تجفيف)**	بالضغط على هذا الزر، يمكنك التبديل بين الخيارات التالية. **خزانة** ← **درجة حرارة منخفضة** ← **كي** ← **مدة التجفيف** (٣٠ دقيقة. ← ١ دقيقة. ← ١:٣٠ دقيقة. ← دقيقتان. ← ٢:٣٠ دقيقة. ← ٣ دقائق. ← ٣:٣٠ دقيقة. ← ٤ دقائق. ← ٤:٣٠ دقيقة.) ← **خزانة** "**Cup Board (خزانة)**" - استخدم هذه الدورة لتجفيف الملابس مثل الملابس القطنية والداخلية والملابس المصنوعة من الكتان. "**Low Temp (درجة حرارة منخفضة)**" - تقوم هذه الدورة بحماية الملابس الحساسة للحرارة تحت درجة تجفيف منخفضة. "**Iron (كي)**" - يعمل هذا الخيار على إنهاء دورة التجفيف في حالة رطبة بقدر يتلاءم مع الكي. "**Time Dry (مدة التجفيف)**" - يعمل هذا الخيار على تجفيف الغسيل في الفترة الزمنية المحددة. • يجب تجنب غسيل الملابس التي قد لا يمكن تجفيفها حيث أنها قد تتعرض للتشوه حتى في درجات الحرارة المنخفضة. • تم اعتماد وظائف خزانة و درجة حرارة منخفضة و الكي تتعرف خيارات التجفيف على وزن الغسيل حتى يتم عرض وقت دقيق لعملية التجفيف وإجرائها بشكل كامل. • قد تختلف ظروف التجفيف باختلاف نوع الغسيل وحجمه.
٩ **زر تحديد INTENSIVE WASH (غسيل مكثف)**	اضغط على هذا الزر مع الملابس المتسخة بشدة والتي تحتاج إلى الغسيل بكثافة. يتم زيادة مدة الدورة لكل الدورات.
١٠ **زر تحديد SILVER WASH (غسيل بالفضة)**	يتم توفير ماء الغسيل بالفضة أثناء دورة الغسيل وكذلك أثناء دورة الشطف الأخيرة مما يعمل على إزالة البكتريا وتوفير الحماية ضد نمو البكتريا لمدة تصل إلى شهر واحد.
١١ **زر تحديد START/PAUSE (تشغيل/إيقاف مؤقت)**	اضغط لإيقاف الدورة مؤقتاً وإعادة تشغيلها.
١٢ **الزر POWER (طاقة)**	اضغط على هذا الزر مرة واحدة لتشغيل الغسالة. واضغط عليه مرة أخرى لإيقاف تشغيلها. في حالة ضغط زر تشغيل الغسالة وتركها لمدة تزيد عن ١٠ دقائق دون ضغط أي زر، يتم إيقاف تشغيلها تلقائيًا.

WD8704CJ-02732A-02_AR.indd 19 4/30/2010 3:07:39 PM

غسيل الملابس

التأمين ضد عبث الأطفال

تمكّنك وظيفة قفل للأطفال من قفل الأزرار حتى لا يكون هناك إمكانية لتغيير دورة الغسيل التي قمت باختيارها.

التشغيل/عدم التشغيل

إذا كنت ترغب في تشغيل وظيفة "تأمين ضد الأطفال" أو عدم تشغيلها، اضغط على الزرين .**Temp (درجة الحرارة)** و **Rinse (شطف)** في وقت واحد لمدة ٣ ثوان. ستضيء علامة "**Child Lock (التأمين ضد عبث الأطفال)** عند تشغيل هذه الميزة.

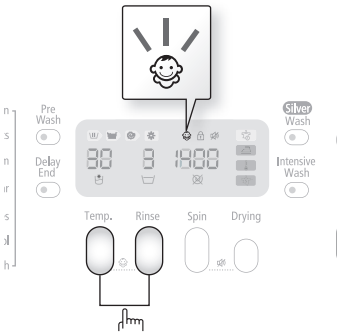

٣ ثوان

يمكن استخدام زر **Power (طاقة)** فقط عند تشغيل وظيفة التأمين ضد عبث الأطفال. يستمر تشغيل وظيفة التأمين ضد عبث الأطفال حتى بعد تشغيل الغسالة وإيقاف تشغيلها أو بعد فصل توصيل سلك التيار الكهربائي وإعادة توصيله.

إيقاف تشغيل الصوت

يمكن تحديد وظيفة إيقاف تشغيل الصوت مع كافة الدورات. عند تحديد هذه الوظيفة، يتم إيقاف تشغيل الصوت لكافة الدورات. حتى في حالة تشغيل الطاقة أو إيقاف تشغيلها بشكل متكرر، لا يتغير الإعداد الذي تم اختياره.

التشغيل/عدم التشغيل

إذا تريد تشغيل وظيفة إيقاف تشغيل الصوت، اضغط على **Spin (تنشيف)** و **Drying (تجفيف)** في نفس الوقت لمدة ٣ ثوان. ستتم إضاءة علامة "**Sound Off (إيقاف تشغيل الصوت)** عندما يتم تشغيل هذه الوظيفة.

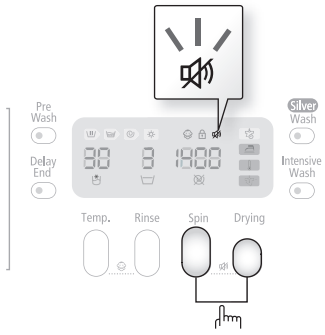

٣ ثوان

تأجيل التوقف

يمكنك ضبط الغسالة لإنهاء عملية الغسيل تلقائياً في وقت لاحق. قم باختيار تأجيل الوقت بين ٣ و ١٩ ساعة (بواقع زيادة ساعة واحدة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسيل.

١. يمكنك ضبط الغسالة تلقائياً أو يدوياً حسب نوع الملابس التي تريد غسلها.
٢. اضغط على الزر **Delay End (تأجيل التوقف)** بشكل متكرر حتى تصل إلى وقت التأجيل المطلوب.
٣. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**. سيضيء مؤشر "**Delay End (تأجيل التوقف)** وتبدأ الساعة بالعد التنازلي حتى تصل إلى الوقت المحدد.
٤. لإلغاء وظيفة تأجيل التوقف، اضغط على الزر**Power (طاقة)** ثم قم بتشغيل الغسالة من جديد.

وظيفة التصريف فقط

عندما ترغب في تصريف المياه من الغسالة، اتبع التعليمات الواردة أدناه.

١. اضغط على زر **Power (طاقة)**.
٢. قم بلف قرص اختيار الدورة إلى وضع تنشيف.
٣. اضغط على زر **Spin (تنشيف)** مرة واحدة حتى يتم تتوقف إشارة عدد اللفات في الدقيقة.
٤. ثم "1" تظهر في الوقت المحدد في المركز.
٥. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

WD8704CJ-02732A-02_AR.indd 20 4/30/2010 3:07:45 PM

غسيل بالهواء

تتيح وظيفة "غسيل بالهواء" غسل الملابس دون استخدام ماء بفضل نظام التهوية القوي. تتضمن الملابس التي يمكن تنظيفها كلا من المعاطف الصوفية والملابس القطنية والبلوزات والجواكت والسترات. (قطعتان أو أقل (أقل من ١ كجم))

١. افتح الباب. ضع الغسيل في الغسالة ثم أغلق الباب.
٢. اضغط على زر **Power (طاقة)**.
٣. اختر **Air Wash (غسيل بالهواء)** عن طريق لف **قرص اختيار الدورة**.

- في كل مرة تقوم فيها بالضغط على الزر، يتبدل وضع التشغيل بالتسلسل التالي: Deodorization (إزالة الروائح الكريهة) و Sanitization (التعقيم).....

الوضع	مدة الدورة
Deodorization (إزالة الروائح الكريهة)	٢٩ دقيقة.
Sanitization (التعقيم)	٥٩ دقيقة.

- عند اختيار أحد هذه الخيارات، لا يمكن اختيار زر أخر حيث يمكنك فقط تحديد تأجيل التوقف حيث يستغرق ما بين ٣:٠٠ إلى ١٩:٠٠.

٤. أغلق الباب واضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

- لا يمكن اختيار **Air Wash (غسيل بالهواء)** عند وجود ماء في الحوض. قم بتصريف الماء واختر **Air Wash (غسيل بالهواء)**.
- اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** أو **Power (طاقة)** لإخراج الغسيل.
- يمكن استخدام عطر أو أوراق مجففة مع برنامج "التنظيف بالبخار" لإضافة رائحة إلى الغسيل الذي تم تنظيفه (ورقة واحدة لكل قطعة غسيل أو قطعتان).

تجنب إجراء التنظيف بالبخار مع الملابس التالية:

- الملابس الحساسة المصنوعة من الجلد أو المنك أو الفرو أو الحرير. الخ
- الملابس الداخلية ذات الأطراف المعقودة ووسائد الدمى التي تحتوي على "غراء" والسترات التي يمكن أن تفقد زينتها.
- الملابس التي تحتوي أطرافها على أزرار لتجنب كسرها.
- الملابس التي تحتوي على نشا لتجنب تشوهها.
- المفروشات الثقيلة مثل الوسائد الخشبية (المزودة بمكان لإراحة الرقبة)
  - الوسائد أو البطاطين المملوءة بالبلاستيك أو القش بدلاً من القطن
  - البطاطين الكهربائية
- البطاطين المصنوعة من الفرو
- البطاطين كبيرة الحجم
- الوسائد الليفية

WD8704CJ-02732A-02_AR.indd 21 4/30/2010 3:07:45 PM

غسيل الملابس

استخدام دورة التجفيف

راجع الملصق الخاص بسعة التجفيف وتأكد من وضع الملابس في المستوى الذي يقل عن الخط المحدد المخصص للملابس التي تم تجفيفها التي تبلغ حمولتها ٥,٠ كجم.

١. افتح باب الغسالة، وضع الملابس ثم أغلق الباب مرة أخرى.
٢. اضغط على الزر **Power (طاقة)** ثم اضغط على الزر **Drying (تجفيف)**.
: سيتم تحديد الدورة القياسية تلقائيًا
يمكن تحديد خيار التجفيف فقط في دورات مثل cotton (قطن) أو synthetics (اصطناعي) أو denim (جينز) أو sports wear (ملابس رياضية).
٣. قم **بتحديد الزر Drying (تجفيف)** كما يلي.

برامج التجفيف

- في كل مرة يتم فيها الضغط على هذا الزر، سيتم تحديد نوع التجفيف بشكل متكرر بالترتيب التالي:
خزانة ← **درجة حرارة منخفضة** ← **كي** ← **مدة التجفيف** (٣٠ دقيقة. ← دقيقة واحدة. ← ١:٣٠ دقيقة. ← دقيقتان. ← ٢:٣٠ دقيقة. ← ٣ دقائق. ← ٣:٣٠ دقيقة. ← ٤ دقائق. ← ٤:٣٠ دقيقة.) ← **خزانة**

نوع التجفيف		معلومات	الحمل الأقصى	مدة (الحمل الأقصى)
التجفيف الآلي	خزانة ( )	قياسي: تجفيف الملابس.	٣,٥ كجم	١٦٠ دقيقة.
	درجة حرارة منخفضة ( )	تجفيف الملابس تحت درجة حرارة منخفضة وذلك لحماية نوع قماش الملابس.	٢,٠ كجم	١٦٠ دقيقة.
	الكي ( )	يتم ترك الملابس رطبة جزئيًا حتى يتسنى كيها بسهولة.	٢,٠ كجم	٣٠ دقيقة.
مدة التجفيف ( )		يمكنك تحديد مدة التجفيف الملائمة على أساس نوع القماش والكمية ونسبة الرطوبة.	٥,٠ كجم	٢٧٠ دقيقة

- يتم عرض "مدة التجفيف" تلقائيًا عن طريق استشعار وزن الملابس قبل التنشيف لزيادة تأثر التنشيف.
- بالنسبة للغسيل الأقل من ٣,٥ كجم، استخدم خاصية التجفيف الآلي. بالنسبة للغسيل الذي يزن أكثر من ٣,٥ كجم، الرجاء استخدم خاصية وقت التجفيف.
- إذا تم تحديد كلاً من التنشيف ودورات التجفيف، فإنه يتم تحديد سرعة المجفف تلقائيًا لتعزيز كفاءة التجفيف.
- عند استخدامك دورة التجفيف، تأكد من أن صمام توريد الماء مفتوح.

٤. ضع مقداراً ملائماً من المسحوق وملين الملابس في درج المسحوق ثم أغلقه مرة أخرى.
٥. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.
: يتم إجراء وظيفة مثلى تلقائيًا بدءًا من الغسيل وحتى التنشيف.

- لا يمكن تبديل الدورة المحددة بعد بدء التنشيف.
- إذا قمت بتحديد وظيفة "التجفيف"، سيتم ضبط كثافة "التنشيف" على "عالي" في الوضع الافتراضي لزيادة تأثير التجفيف.
- في حالة عدم توريد ماء بارد، لا يتم إجراء التجفيف.
- إذا لم تقم بإخراج الملابس من الحوض بعد انتهاء التجفيف، سيتم إجراء وظيفة "الحماية من الكرمشة" لمدة ٣٠ دقيقة تقريبًا مع عرض [إنهاء]. لإخراج الملابس: اضغط أولاً على الزر Start/Pause (تشغيل/إيقاف مؤقت) أو Power (طاقة) وأخرج الملابس.
- إذا كنت تريد إجراء التجفيف بعد الغسيل باليد، حدد كل من Spin (تنشيف) و Drying (تجفيف) في نفس الوقت.

WD8704CJ-02732A-02_AR.indd 22 4/30/2010 3:07:46 PM

غسيل الملابس باستخدام قرص تحديد الدورة

تتيح الغسالة الجديدة غسيل الملابس بسهولة، باستخدام نظام "التحكم الذكي" الأوتوماتيكي من Samsung. عند اختيار أحد برامج الغسيل، تقوم الغسالة بضبط درجة الحرارة ووقت الغسل وسرعات الغسيل المناسبة.

١. افتح صنبور الماء.
٢. اضغط على زر **Power (طاقة)**.
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل ومنعم القماش ومسحوق الغسيل الأولي (إذا لزم الأمر) في الحجيرات الخاصة به.

تتاح خاصية Pre-wash (غسيل أولي) عند تحديد الدورات: Cotton (قطن) و Synthetics (اصطناعي) و Baby Care (ملابس أطفال) و Water Saving (توفير الماء). وبعد الغسيل الأولي ضرورياً فقط في حالة الاتساخ الشديد للملابس.

٧. استخدم **قرص تحديد الدورة** لتحديد الدورة المناسبة وفقاً لنوع المادة :
Cotton (قطن) و Synthetics (اصطناعي) و Sports Wear (ملابس رياضية) و Delicates (أنسجة رقيقة) و Wool (صوف) و Hand Wash (غسيل يدوي) و Water Saving (توفير الماء) و Quick 29' (29' سريع). ستضاء المؤشرات المرتبطة على لوحة التحكم.
٨. في هذا الوقت، يمكنك التحكم في درجة حرارة عملية الغسيل وحجم الشطف وسرعة التنشيف ووقت التأجيل بالضغط على زر الخيار المناسب.
٩. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** وعندها تبدأ الغسالة في العمل. يضيء مؤشر العملية ويظهر الوقت المتبقي للدورة على الشاشة.

خيار الإيقاف المؤقت

من الممكن إضافة/إزالة قطع الملابس في غضون ٥ دقائق من بدء الغسيل.

١. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** لإلغاء قفل الباب.

لا يمكن فتح الباب عندما تكون درجة حرارة الماء عالية جداً أو مستوى الماء عالي جداً.

٢. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** لإعادة تشغيل الغسالة.

عند انتهاء الدورة:

بعد انتهاء دورة الغسيل بالكامل، يتم إيقاف الغسالة تلقائيًا.

١. افتح الباب.
٢. أخرج الملابس.

غسيل الملابس يدوياً

يمكنك غسيل الملابس يدوياً دون استخدام قرص تحديد الدورة.

١. قم بتشغيل مصدر توريد الماء.
٢. اضغط على زر **Power (طاقة)** الموجود في الغسالة.
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل، وإذا لزم الأمر، أضف منعم الأقمشة أو مسحوق الغسيل الأولي في الحجيرات المناسبة.
٧. اضغط على الزر .**Temp (درجة الحرارة)** لتحديد درجة الحرارة المطلوبة. (ماء بارد و ٣٠° مئوية و ٤٠° مئوية و ٦٠° مئوية و ٩٥° مئوية)
٨. اضغط على الزر **Rinse (شطف)** لتحديد العدد المطلوب لدورات الشطف.
الحد الأقصى لعدد دورات الشطف هو خمسة.
يتم زيادة مدة الغسيل وفقاً لعدد الدورات.
٩. اضغط على الزر **Spin (تنشيف)** لتحديد سرعة التجفيف.
تسمح لك وظيفة إيقاف الشطف بإخراج الملابس التي لا تزال مبتلة من الغسالة.
(⊗ : بدون تنشيف، ⎍ : إيقاف الشطف)
١٠. اضغط على الزر **Delay End (تأجيل التوقف)** بشكل متكرر للتنقل بين خيارات تأجيل التوقف المتوفرة بين (٣ إلى ١٩ ساعة بإمكانية زيادة ساعة واحدة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسيل.
١١. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** وعندها يبدأ تشغيل الدورة.

WD8704CJ-02732A-02_AR.indd 23 4/30/2010 3:07:46 PM

غسيل الملابس

دليل غسيل الملابس

اتبع هذه التعليمات البسيطة للحصول على ملابس أكثر نظافة وأكثر فاعلية.

قم بفحص بطاقة العناية الموجودة على الملابس دوماً قبل الغسيل.

افرز الملابس واغسلها وفقاً للمعايير التالية:

- بطاقة العناية: افرز الملابس إلى أقطان وألياف متنوعة وأقمشة صناعية وملابس حريرية وأصواف وحرير صناعي.
- اللون: فم بفصل الملابس البيضاء عن الملابس الملونة. اغسل الملابس الجديدة الملونة كل على حدة.
- الحجم: بعمل وضع الملابس بمختلف أحجامها في مرة واحدة على تحسين عملية الغسيل.
- رقة الملمس: اغسل الملابس الرقيقة كل على حدة. باستخدام الدورة Delicate (أنسجة رقيقة) للحصول على ملابس صوفية وستائر وملابس حريرية نقية تبدو جديدة. افحص العلامات الموجودة بالملابس التي تريد غسلها أو راجع جدول العناية بالأقمشة في الملحق.

إفراغ الجيوب

قم بإفراغ كافة جيوب الملابس قبل كل عملية غسيل. حيث يمكن أن تتسبب الأشياء الصغيرة والصلبة ذات الأشكال غير المنتظمة مثل العملات المعدنية والشفرات والدبابيس وماسكات الورق في تلف الغسالة. لا تقم بغسل الملابس المزودة بإبزيمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

قد تتسبب المعادن المستخدمة في الملابس في تلفها وتلف الحوض. اقلب الملابس المزينة بالأزرار والمطرزة على ظهرها قبل غسلها. إذا تركت إبزيمات السراويل والجواكت مفتوحة أثناء الغسيل، فإن هذا قد يتسبب في تلف سلة التنشيف. يجب غلق الإبزيمات وتثبيتها بخيط قبل الغسيل.

قد تتشابك الملابس ذات الخيوط الطويلة مع ملابس أخرى وقد يؤدي ذلك إلى تلف هذه الملابس. احرص على تثبيت الخيوط قبل بدء الغسيل.

الغسيل الأولي للملابس القطنية

تقدم لك الغسالة الجديدة باستخدام مساحيق الغسيل الحديثة، أفضل نتائج لعمليات الغسيل، ومن ثم فهي تساعدك على توفير الطاقة الكهربائية والوقت والماء والمسحوق. لكن إذا كانت الملابس القطنية شديدة الاتساخ، استخدم الغسيل الأولي مع مسحوق الغسيل الذي يحتوي على البروتين.

تحديد سعة وزن الملابس

لا تتجاوز الوزن المحدد للغسالة حيث يؤدي ذلك إلى الحصول على نتائج غير مرضية. استخدم الجدول التالي لتحديد سعة الوزن لنوع الملابس التي تقوم بغسلها.

نوع القماش	سعة الوزن
الطراز	WD8704/ WD8702/ WD8700
Cotton (قطن) - متوسط/خفيف الاتساخ - شديدة الاتساخ	٨,٠ كجم
Synthetics (اصطناعي)	٣,٠ كجم
Denim (جينز)	٣,٠ كجم
Sports Wear (ملابس رياضية)	٢,٥ كجم
Delicates (أنسجة رقيقة)	٢,٥ كجم
Wool (صوف)	٢,٠ كجم

- في حالة عدم توازن الملابس (يضيء "UE" على الشاشة)، وفي هذه الحالة، أعد توزيع الملابس. حيث يؤدي عدم توازن الملابس إلى تقليل فعالية دورة التنشيف.
- عند غسيل المفارش أو الألحفة، قد تطول مدة الغسيل أو تقل فعالية عملية التجفيف.

WD8704CJ-02732A-02_AR.indd 24 4/30/2010 3:07:46 PM

تأكد من إدخال حمالات الصدر (التي يمكن غسلها في الماء) في شبكة غسيل (يتم شراؤها بشكل منفصل).

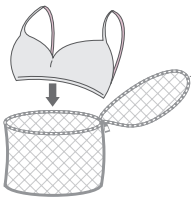

- قد تنكسر الأجزاء المعدنية الموجودة في حمالات الصدر مما قد يؤدي إلى تلف الغسيل. لذا يجب عليك أن تتأكد من وضعهم داخل شبكة غسيل جيدة.
- قد تتعلق الملابس الصغيرة والخفيفة بالباب مثل الجوارب والقفازات والمنسوجات والمناديل. لذا قم بوضعهم داخل شبكة غسيل جيدة.

تنبيه: لا تقم بغسل شبكة الغسيل وحدها دون وجود ملابس بها. فقد يؤدي ذلك إلى حدوث اهتزازات غير طبيعية للغسالة مما قد يؤدي إلى تحريكها من مكانها ووقوع حوادث ينتج عنها إصابات.

معلومات حول مسحوق الغسيل والمواد الإضافية

ما هو مسحوق الغسيل الذي يمكنك استخدامه

يعتمد نوع مسحوق الغسيل الذي تستخدمه على نوع القماش (القطن أو الألياف الصناعية أو الأنسجة الرقيقة أو الصوف)، والألوان ودرجة حرارة الماء ودرجة الاتساخ. استخدم دوماً مسحوق الغسيل ذا "الرغوة القليلة" المصمَّم خصيصاً للغسالات الأوتوماتيكية.
اتبع توصيات الشركة المصنعة لمسحوق الغسيل وفقًا لوزن الملابس ودرجة الاتساخ ودرجة نقاء الماء في منطقتك. وإذا لم تكن تعرف ما إذا كان الماء نقيًا أم لا في منطقتك، اتصل بالهيئة المسؤولة عن الماء.

لا تستخدم منظف صلب أو خشن لأنه قد يتبقى في دورة الشطف. لأن ذلك قد يتسبب في أداء الغسالة لدورة الشطف بشكل غير صحيح.أو يتسبب في إعاقة تدفق الماء.

الرجاء ملاحظة التعليمات عند استخدام دورة "الصوف".

- استخدم مسحوقًا سائلاً جيداً لغسيل الصوف فقط.
- فعند استخدامك مسحوقًا بودرة، فقد يترك أثرًا على الغسيل ويتسبب في تلف الصوف.

درج مسحوق الغسيل

تحتوى الغسالة على حجيرات منفصلة لتوزيع المسحوق ومنعم الأقمشة. قم بإضافة كافة المواد الإضافية الخاصة بتنظيف الملابس إلى الحجيرة المناسبة قبل بدء تشغيل الغسالة.

لا تقم بفتح درج المسحوق أثناء تشغيل الغسالة.

١. اسحب درج مسحوق الغسيل الموجود على الجانب الأيسر من لوحة التحكم.

٢. قم بإضافة كمية من مسحوق الغسيل الموصى به مباشرة في حجيرة المسحوق Ⅱ قبل تشغيل الغسالة.

٣. قم بإضافة الكمية الموصى بها من منعم الأقمشة في الحجيرة الخاصة به ❀ إذا لزم الأمر.

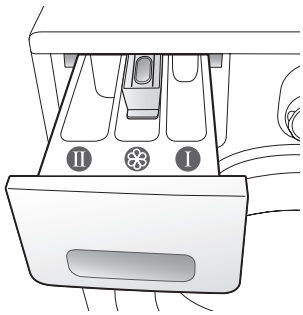

تنبيه: لا تقم بإضافة أي منظف مسحوق/سائل إلى حجيرة المنعّم ❀.

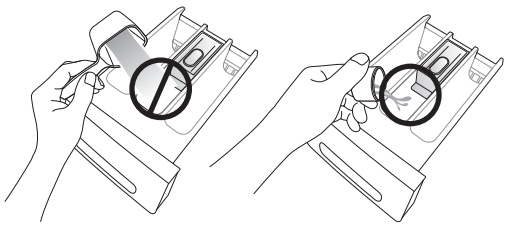

٤. عند استخدام خيار الغسيل الأولي، قم بإضافة الكمية الموصى بها من مسحوق الغسيل في حجيرة الغسيل الأولي Ⅰ.

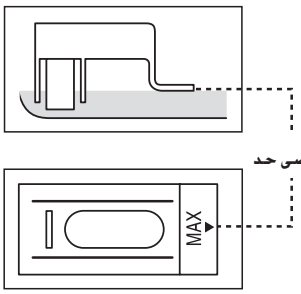

لا تستخدم أنواع المساحيق التالية عند غسيل الملابس كبيرة الحجم.

- مساحيق الغسيل التي تكون على شكل ألواح أو أقراص
- المساحيق التي تكون على شكل كرة أو شبكة

يجب إذابة منعم الأقمشة المركز أو السميك بقليل من الماء قبل صبه في درج التوزيع (لمنع إعاقة تدفق الماء.)

تجنب عدم تدفق منعّم الأقمشة عند غلق درج المنظف بعد إضافة منعّم الأقمشة بداخل حجيرة مسحوق الشطف.

WD8704CJ-02732A-02_AR.indd 25 4/30/2010 3:07:50 PM

تنظيف الغسالة وصيانتها

يعمل حفظ الغسالة نظيفة على تحسين أدائها، وتجنب الإصلاحات غير الضرورية، وزيادة عمر الغسالة.

تصريف الماء من الغسالة عند الطوارئ

١. افصل الغسالة من مصدر الطاقة.
٢. افتح غطاء المصفاة باستخدام عملة معدنية أو مفتاح.

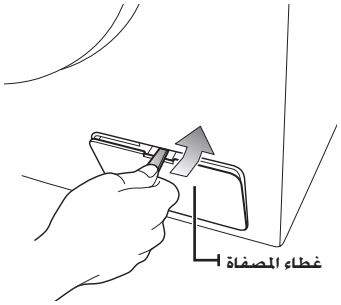

٣. فُك غطاء التصريف عند الطوارئ عن طريق لفه لليسار.

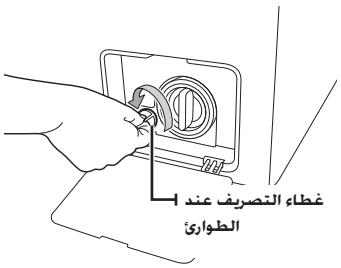

٤. أمسك الغطاء من نهاية أنبوب التصريف عند الطوارئ واجذبه ببطء مسافة حوالي ١٥ سم.
٥. اسمح بتدفق الماء بأكمله في وعاء.
٦. أعد إدخال أنبوب التصريف وثبت الغطاء مرة أخرى.
٧. أعد غطاء المصفاة إلى مكانه.

تنظيف الأسطح الخارجية

١. امسح الأسطح الخارجية لجهاز الغسالة، بما في ذلك لوحة التحكم بقطعة من القماش الناعم ومسحوق تنظيف منزلي غير خادش.
٢. استخدم قطعة من القماش الناعم لتجفيف الأسطح الخارجية.
٣. لا تصب الماء على الغسالة.

WD8704CJ-02732A-02_AR.indd 26 4/30/2010 3:07:51 PM

تنظيف درج مسحوق الغسيل والجزء الداخلي منه

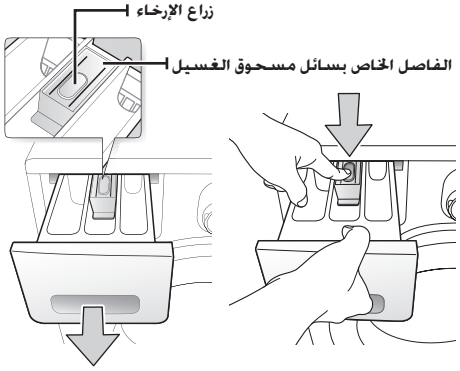

١. اضغط ذراع الإرخاء الموجودة في داخل درج مسحوق الغسيل واسحبه إلى الخارج.
٢. قم بإزالة الفاصل الخاص بسائل مسحوق الغسيل من درج مسحوق الغسيل

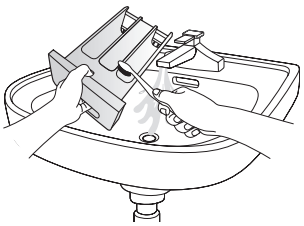

٣. اغسل كافة الأجزاء بالماء الجاري.

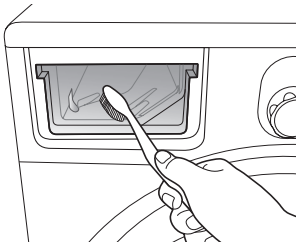

٤. نظف الجزء الداخلي للدرج باستخدام فرشاة أسنان قديمة.
٥. ضع الفاصل الخاص بسائل مسحوق الغسيل في مكانه عن طريق دفعه بقوة في الدرج.
٦. أعد الدرج إلى مكانه.
٧. قم بتشغيل دورة الشطف دون وجود أي غسيل في الحاوية لإزالة أي مسحوق متبقي.

تنظيف مصفاة المخلفات

توصي Samsung بتنظيف مصفاة المخلفات ٥ أو ٦ مرات في العام. أو عند عرض رسالة الخطأ "5E" (راجع "تصريف الماء من الغسالة عند الطوارئ" في الصفحة السابقة.)

١. افتح غطاء المصفاة باستخدام مفتاح أو قطعة معدنية.
٢. أرخ غطاء التصريف عند الطوارئ بلفه إلى اليسار لصرف الماء من الغسالة.
٣. أرخ غطاء مصفاة المخلفات.

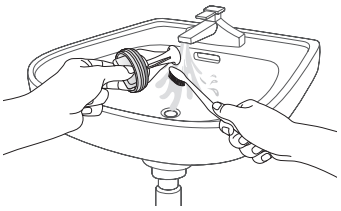

٤. قم بغسل أية أوساخ أو أي مواد أخرى عالقة في مصفاة المخلفات. تأكد أن مروحة مضخة التصريف الموجودة خلف مصفاة المخلفات غير مسدودة.
٥. ضع غطاء مصفاة المخلفات في مكانه.
٦. استبدل غطاء المصفاة

WD8704CJ-02732A-02_AR.indd 27 4/30/2010 3:07:55 PM

تنظيف الغسالة وصيانتها

تنظيف المصفاة الشبكية المتصلة بخرطوم الماء

يجب عليك تنظيف المصفاة الشبكية المتصلة بخرطوم الماء مرة كل عام على الأقل، أو عند ظهور رسالة خطأ "4E":

١. قم بإيقاف تشغيل مصدر توريد الماء إلى الغسالة.
٢. افصل الخرطوم عن الجانب الخلفي من الغسالة. قم بتغطية الخرطوم بقطعة من القماش، لمنع تدفق الماء بسبب الضغط العالي في الخرطوم.
٣. باستخدام الزردية، اسحب المصفاة الشبكية إلى الخارج من طرف الخرطوم بلطف واشطفها بالماء حتى تصبح نظيفة. نظف كذلك الجزأين الداخلي والخارجي للوصلة الملفوفة.
٤. أعد المصفاة إلى مكانها.
٥. ثبت الخرطوم في الغسالة مرة أخرى.
٦. تأكد أن الوصلات محكمة ضد الماء وقم بتشغيل الصنبور.

إصلاح جهاز غسالة متجمد

إذا انخفضت درجة الحرارة إلى أقل من درجة التجمد وتجمدت الغسالة:

١. افصل الغسالة من مصدر التيار الكهربائي.
٢. صب الماء الدافئ على صنبور الماء لإرخاء خرطوم توريد الماء.
٣. قم بإزالة خرطوم توريد الماء وانقعه في الماء الدافئ.
٤. صب الماء الدافئ في حاوية الغسالة واتركه لمدة ١٠ دقائق.
٥. أعد توصيل خرطوم توريد الماء إلى صنبور الماء وتأكد من أن توريد الماء والتصريف يتم كما ينبغي.

تخزين الغسالة

إذا كنت بحاجة إلى تخزين الغسالة لمدة طويلة، فمن المستحسن تصريف الماء منها وفصلها. حيث يمكن أن تتلف الغسالة في حالة ترك ماء في الخراطيم والمكونات الداخلية قبل التخزين.

١. اختر الدورة '29 Quick (29' سريع) ثم قم بإضافة مادة تبييض في الحجيرة الخاصة بمادة التبييض. قم بتشغيل الغسالة من خلال الدورة دون وجود ملابس بها.
٢. قم بإيقاف صنابير الماء وافصل خراطيم صنابير الماء.
٣. قم بفصل الغسالة عن منفذ التيار الكهربائي، واترك باب الغسالة مفتوحًا للسماح بدخول الهواء داخل الحاوية.

في حالة قيامك بتخزين الغسالة في درجات حرارة تحت التجمد، اجعل هناك فرصة لخروج الماء المتبقي في الغسالة قبل استخدامها مرة أخرى.

WD8704CJ-02732A-02_AR.indd 28 4/30/2010 3:07:55 PM

استكشاف المشاكل وحلها ورموز المعلومات

تحقق مما يلي إذا كانت الغسالة...

المشكلة	الحل
لا تعمل	• تأكد من توصيل قابس الغسالة بمصدر التيار الكهربائي. • تأكد من إغلاق الباب بإحكام. • تأكد من فتح مصدر صنابير الماء. • تأكد من الضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).
عدم وجود ماء أو عدم وجود ماء كافٍ	• افتح الصنبور تماماً. • تأكد من أن خرطوم توريد الماء غير متجمد. • فك ثنيات خراطيم توريد الماء. • نظف المصفاة الموجودة على الخرطوم الخاص بمدخل الماء.
هل يوجد مسحوق غسيل في الدرج بعد اكتمال دورة الغسيل	• تأكد من تشغيل الغسالة بضغط ماء كاف. • تأكد من إضافة مسحوق الغسيل في منتصف درج المسحوق.
تهتز الغسالة أو تحدث صوتاً مرتفعاً	• تأكد من تركيب الغسالة على أرض مستوية. إذا كانت الأرض غير مستوية، اضبط قدم الغسالة حتى تستوي على الأرضية. • تأكد من إزالة مسامير الشحن. • تأكد من عدم ملامسة الغسالة لأي شيء آخر. • تأكد من توزيع وزن الملابس الموجودة في الغسالة.
لا يتم تصريف الماء من الغسالة و/أو لا تقم بعملية التنشيف	• فك الثنيات الموجودة في خرطوم التصريف. قلل من استخدام الخراطيم الملتوية. • تأكد أن المصفاة الشبكية المتصلة بخرطوم الماء غير مسدودة.
الباب مغلق ولا يمكن فتحه	• لا يمكن فتح الباب حتى تمر ٣ دقائق على توقف الجهاز عن العمل أو فصل التيار الكهربي.

في حالة استمرار المشكلة، اتصل بمركز خدمة عملاء Samsung المحلي

WD8704CJ-02732A-02_AR.indd 29 4/30/2010 3:07:55 PM

استكشاف المشاكل وحلها ورموز المعلومات

رموز المعلومات

عندما تتعرض الغسالة للعطل، قد يظهر أحد رموز المعلومات على الشاشة. في حالة حدوث ذلك، الرجاء التحقق من هذا الجدول وتجربة الحلول المقترحة قبل الاتصال بخدمة العملاء.

رمز الكود	الحل
dE	• أغلق الباب.
4E	• تأكد أن صنبور توريد الماء مفتوح. • تأكد من ضغط الماء.
5E	• نظف مصفاة المخلفات. • تأكد من تركيب خرطوم تصريف الماء بطريقة صحيحة.
UE	• وزن الملابس غير موزّع. قم بإعادة توزيع الملابس. في حالة غسل قطعة واحدة من الملابس، مثل رداء حمام أو جينز، قد لا تكون نتيجة التنشيف النهائي مرضية، وتظهر رسالة خطأ "UE" في إطار العرض.
cE / 3E	• اتصل بخدمة ما بعد البيع.
Hot	• سوف تظهر عندما تكون درجة الحرارة الداخلية في الحاوية مرتفعة. ستعمل المروحة تلقائيًا. لذا يُرجى الانتظار حتى تختفي علامة "Hot".

بالنسبة للرموز التي لم تذكر أعلاه، أو في حالة عدم مساهمة الحل المقترح في حل المشكلة، اتصل بمركز خدمة Samsung أو الموزع المحلي المعتمد التابع لـ Samsung.

WD8704CJ-02732A-02_AR.indd 30 4/30/2010 3:07:55 PM

جدول الدورة

جدول الدورة

(● خيارات المستخدم)

البرنامج	أقصى وزن (كجم)	مسحوق الغسيل			غسيل بالفضة	أقصى درجة حرارة (مئوية)
	WD8704/ WD8702/ WD8700	غسيل أولي	غسيل	منعم الأقمشة		
Cotton (قطن)	٨,٠	●	نعم	●	●	٩٥
Synthetics (اصطناعي)	٣,٠	●	نعم	●	●	٦٠
Denim (جينز)	٣,٠	●	نعم	●	●	٦٠
Sports Wear (ملابس رياضية)	٢,٥	●	نعم	●	●	٦٠
Delicates (أنسجة رقيقة)	٢,٥	-	نعم	-	-	٤٠
Wool (صوف)	٢,٠	-	نعم	-	-	٤٠
Handwash (غسيل يدوي)	٢,٠	-	نعم	●	-	٤٠
Deodorization (إزالة الروائح الكريهة)	١,٠	-	-	-	-	-
Sanitization (التعقيم)	١,٠	-	-	-	-	-
Drying (تجفيف)	٥,٠	-	-	-	-	-
Water Saving (توفير الماء)	٣,٠	●	نعم	●	●	٦٠
Quick 29' (29' سريع)	٣,٠	-	نعم	●	-	٦٠

البرنامج	سرعة التنشيف (القصوى) (دورة/دقيقة)			تأجيل التوقف	مدة الدورة (دقيقة)
	WD8704	WD8702	WD8700		
Cotton (قطن)	١٤٠٠	١٢٠٠	١٠٠٠	●	١٢٠
Synthetics (اصطناعي)	١٢٠٠	١٢٠٠	١٠٠٠	●	٩٠
Denim (جينز)	٨٠٠	٨٠٠	٨٠٠	●	٧٨
Sports Wear (ملابس رياضية)	١٢٠٠	١٢٠٠	١٠٠٠	●	٧٢
Delicates (أنسجة رقيقة)	٨٠٠	٨٠٠	٨٠٠	●	٥٠
Wool (صوف)	٨٠٠	٨٠٠	٨٠٠	●	٣٨
Handwash (غسيل يدوي)	٤٠٠	٤٠٠	٤٠٠	●	٣١
Deodorization (إزالة الروائح الكريهة)	-	-	-	●	٢٩
Sanitization (التعقيم)	-	-	-	●	٥٩
Drying (تجفيف)	-	-	-	●	١٦٠
Water Saving (توفير الماء)	١٢٠٠	١٢٠٠	١٠٠٠	●	٧٠
Quick 29' (29' سريع)	١٤٠٠	١٢٠٠	١٠٠٠	●	٢٩

١. تستغرق دورة الغسيل الأولي مدة أطول بحوالي ١٥ دقيقة.
٢. تم قياس بيانات مدد الدورات وفقاً للشروط المنصوص عليها في مقياس IEC 60456/EN 60456.
٣. قد يختلف وقت الدورة في كل منزل عن القيم المبينة في الجدول بسبب الاختلاف في ضغط الماء ودرجة الحرارة الخاصة بتوريد الماء وكمية الملابس ونوعها.
٤. عند تحديد وظيفة Intensive Wash (غسيل مكثف)، يتم زيادة مدة الدورة لكل الدورات.

WD8704CJ-02732A-02_AR.indd 31 4/30/2010 3:07:56 PM

الملحق

جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية أربعة رموز على النحو التالي: غسيل، تبييض، تجفيف، وكي، وتنظيف جاف إذا لزم الأمر.
يضمن استخدام هذه الرموز التناسق بين الشركات المصنعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

مواد مقاومة		يمكن الكي عند ١٠٠°م بحد أقصى	
أنسجة رقيقة		يحظر الكي	
يمكن الغسيل عند ٩٥درجة مئوية	95 95	يمكن استخدام التنظيف الجاف باستخدام أي مواد مذيبة	(A)
يمكن الغسيل عند ٦٠ درجة مئوية	60 60	التنظيف الجاف بالبروكلوريد أو الوقود المخفف أو الكحول النقي أو R113 فقط	(P)
يمكن الغسيل عند ٤٠ درجة مئوية	40 40	التنظيف الجاف بوقود الطائرات أو الكحول النقي أو R113 فقط	(F)
يمكن الغسيل عند ٣٠ درجة مئوية	30 30	يحظر استخدام التنظيف الجاف	
تغسل باليد		تجفف وهي مفرودة	
تنظيف جاف فقط		يمكن تعليقها لتجف	
يمكن استخدام مادة تبييض مع الماء البارد	Cl	تجفيف الملابس وهي معلقة على حمالة	
يحظر استخدام مادة تبييض		تجفيف بالتدوير، حرارة عادية	
يمكن الكي عند ٢٠٠°م بحد أقصى		تجفيف بالتدوير، حرارة خفيفة	
يمكن الكي عند ١٥٠°م بحد أقصى		يحظر تجفيفها بالتدوير	

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. قم بإزالة الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.
- لا تضع مسحوق غسيل أكثر من الكمية المبينة في إرشادات الشركة المصنعة لمسحوق الغسيل.
- استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسيل عند الحاجة فقط.
- وفر الماء والكهرباء من خلال إجراء الغسيل بأوزان كاملة (تختلف الكمية وفقاً للبرنامج المستخدم).

إعلان التوافق

يتوافق هذا الجهاز مع مقاييس السلامة الأوروبية و EC directive 93/68 و EN Standard 60335.

WD8704CJ-02732A-02_AR.indd 32 4/30/2010 3:08:12 PM

المواصفات

النوع		غسالة التحميل الأمامي		
الأبعاد		WD8704CJ/WD8704DJ/WD8704EJ/WD8704RJ WD8702CJ/WD8702DJ/WD8702EJ/WD8704RJ WD8702CJ/WD8702DJ/WD8702EJ/WD8700RJ		
		العرض ٥٩٨ م × العمق ٦٠٠ م × الارتفاع ٨٤٤ م		
ضغط الماء		٥٠ كيلوباسكال ~ ٨٠٠ كيلوباسكال		
كمية الماء		٥٦ لتر		
الوزن الصافي		WD8704CJ/ WD8704DJ/ WD8704EJ/ WD8704RJ	WD8702CJ/ WD8702DJ/ WD8702EJ/ WD8702RJ	WD8700CJ/ WD8700DJ/ WD8700EJ/ WD8700RJ
		٧٠ كجم	٦٩ كجم	٦٨ كجم
سعة الغسيل والتنشيف		٨,٠ كجم [ملابس جافة]		
سعة التجفيف		٥ كجم		
استهلاك الطاقة	الطراز	WD8704CJ/WD8704DJ/WD8704EJ/WD8704RJ WD8702CJ/WD8702DJ/WD8702EJ/WD8702RJ WD8700CJ/WD8700DJ/WD8700EJ/WD8700RJ		
	الغسيل	٢٢٠ فولت	١٥٠ وات	
		٢٤٠ فولت	١٥٠ وات	
	الغسيل والتسخين	٢٢٠ فولت	٢٠٠٠ وات	
		٢٤٠ فولت	٢٤٠٠ وات	
	التجفيف	٢٣٠ فولت	١٦٠٠ وات	
	التنشيف / الطراز	WD8704CJ/ WD8704DJ/ WD8704EJ/ WD8704RJ	WD8702CJ/ WD8702DJ/ WD8702EJ/ WD8702RJ	WD8700CJ/ WD8700DJ/ WD8700EJ/ WD8700RJ
	التنشيف / ٢٣٠ فولت	٣٥٠ وات	٢٥٠ وات	٢٠٠ وات
	الضخ	٣٤ وات		
العبوة الوزن	الطراز	WD8704CJ/WD8704DJ/WD8704EJ/WD8704RJ WD8702CJ/WD8702DJ/WD8702EJ/WD8702RJ WD8700CJ/WD8700DJ/WD8700EJ/WD8700RJ		
	غلاف ورقي	٢,٥ كجم		
	غلاف بلاستيكي	٢,٥ كجم		
دورات التنشيف	الطراز	WD8704CJ/ WD8704DJ/ WD8704EJ/ WD8704RJ	WD8702CJ/ WD8702DJ/ WD8702EJ/ WD8702RJ	WD8700CJ/ WD8700DJ/ WD8700EJ/ WD8700RJ
	دورة في الدقيقة	١٤٠٠	١٢٠٠	١٠٠٠

قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض تحسين المنتج.

WD8704CJ-02732A-02_AR.indd 33 4/30/2010 3:08:12 PM

الملحق

WD8704CJ-02732A-02_AR.indd 34 4/30/2010 3:08:12 PM

مذكرة

هل لديك أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت على
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com

كود رقم. DC68-02732A-02_AR